

On-Demand Water Heater Installation Manual and Owner's Guide




ANSI Z21.10.3 and CSA 4.3



510 (T-D2) models
only

Models

- 110 Indoor (T-KJr2-IN)
- 110 Outdoor (T-KJr2-OS)
- 310 Indoor (T-K4-IN)
- 310 Outdoor (T-K4-OS)
- 510 Indoor (T-D2-IN)
- 510 Outdoor (T-D2-OS)

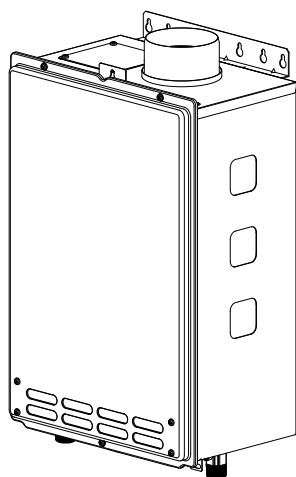

Gas Tankless Water Heater

*Suitable for potable water heating and space-heating **

**Please refer to local codes for space-heating compliance.*

FEATURING

- ☐ ENDLESS HOT WATER
- ☐ ON DEMAND USAGE
- ☐ COMPACT, SPACE SAVING
- ☐ ENERGY CONSERVATION
- ☐ COMPUTERIZED SAFETY
- ☐ NO PILOT LIGHT
- ☐ EASY-LINK SYSTEM

510 (T-D2) models only



WARNING

If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

-Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

-WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- ☐ Do not touch any electric switch, do not use any phone in your building.
- ☐ Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- ☐ If you cannot reach your gas supplier, call the fire department.

-Installation and service must be performed by a qualified installer, service agency or the gas supplier.

If you have any questions, please call or write to:

500 Tennessee Waltz Parkway
Ashland City, TN 37015
Toll Free: 1- 877-737-2840

CONTENTS

Installation Manual

SPECIFICATIONS.....	3
INTRODUCTION.....	4
SAFETY GUIDELINES.....	5
INSTALLATION.....	6
General.....	6
Clearances.....	8
Included Accessories.....	8
Optional Items.....	9
High-Altitude Installations.....	11
Venting Instructions.....	12
Gas Supply and Gas Pipe Sizing.....	17
Water Connections.....	20
Electrical Connections.....	21
Remote Controller Connections.....	22
Pump Control Connections.....	23
Easy-Link System.....	24
APPLICATIONS.....	28
INITIAL OPERATION.....	30

Owner's Guide

OPERATING SAFETY.....	31
NORMAL OPERATION.....	33
General.....	33
Temperature Settings.....	33
Flow.....	35
Freeze Protection System.....	35
Maintenance and Service.....	36
Unit Draining and Filter Cleaning.....	36
TROUBLESHOOTING.....	37
General.....	37
Error Codes.....	39
COMPONENTS DIAGRAM.....	42
PARTS LIST.....	46
OUTPUT TEMPERATURE CHART.....	49
LIMITED WARRANTY.....	51

Installation Manual

SPECIFICATIONS

Model		110 Indoor (T-KJr2-IN)	110 Outdoor (T-KJr2-OS)	310 Indoor (T-K4-IN)	310 Outdoor (T-K4-OS)	510 Indoor (T-D2-IN)	510 Outdoor (T-D2-OS)	
Natural Gas Input (Operating Range)		Min: 19,500 Btu/h Max: 140,000 Btu/h		Min: 11,000 Btu/h Max: 190,000 Btu/h		Min: 11,000 Btu/h Max: 199,000 Btu/h		
Propane Input (Operating Range)		Min: 19,500 Btu/h Max: 140,000 Btu/h		Min: 11,000 Btu/h Max: 190,000 Btu/h		Min: 11,000 Btu/h Max: 199,000 Btu/h		
Gas Connection		¾" NPT						
Water Connections		¾" NPT						
Water Pressure		15 - 150 psi*						
Natural Gas Inlet Pressure		Min. 5.0" WC Max. 10.5" WC						
Propane Inlet Pressure		Min. 8.0" WC Max. 14.0" WC						
Manifold Pressure**	Natural	2.0" WC	2.5" WC	2.0" WC	2.5" WC	2.0" WC	2.5" WC	
	Propane	2.5" WC	3.1" WC	3.7" WC	4.0" WC	3.7" WC	4.5" WC	
Weight		33 lbs.		38 lbs.		39 lbs.		
Dimensions		H20.5" x W13.8" x D6.7"		H20.5" x W13.8" x D8.5"				
Ignition		Electric Ignition						
Electric	Supply		120 VAC / 60 Hz					
	Consumption	Operation	73.1 W / 0.61 A		87.6 W / 0.73 A		89.8 W / 0.75 A	
		Standby	6.2 W / 0.05 A		6.2 W / 0.05 A		6.2 W / 0.05 A	
		Freeze-Protection	111 W / 0.93 A		111 W / 0.93 A		111 W / 0.93 A	

*40 psi or above is recommended for maximum flow.


The Manifold Pressure is the factory setting and generally **should not need adjustment.

NOTE:

- ☐ Check the rating plate to ensure this product matches your specifications.
- ☐ In accordance with ANSI Z21.10.3, CO emission does not exceed 400 PPM for normal input.
- ☐ **The manufacturer reserves the right to discontinue, or change at any time, specifications or designs without notice and without incurring obligations.**

INTRODUCTION

- ❑ This manual provides information necessary for the installation, operation, and maintenance of the water heater.
- ❑ The model description is listed on the rating plate which is attached to the front panel of the water heater.
- ❑ Please read all installation instructions completely before installing this product.
- ❑ If you have any problems or questions regarding this equipment, consult with the manufacturer or its local representative.
- ❑ This equipment is an on-demand, tankless water heater designed to efficiently supply endless hot water for your needs.
- ❑ The 110 Indoor (T-KJr2-IN), 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN) models are to be only installed indoor (direct-vent convertible). The 110 Outdoor (T-KJr2-OS), 310 Outdoor (T-K4-OS) and 510 Outdoor (T-D2-OS) models are to be only installed outdoor.
- ❑ The principle behind tankless water heaters is simple:

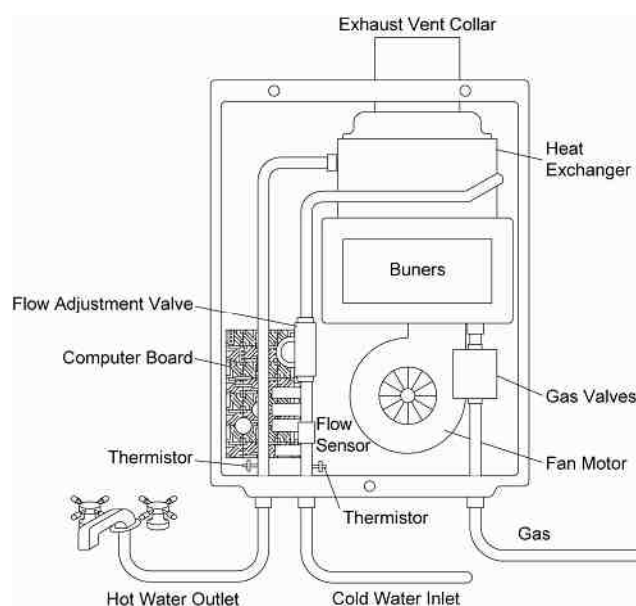

*This diagram illustrates tankless water heater design concepts only and does not accurately represent to the water heater's physical description.

1. A hot water tap is turned on.
2. Water enters the heater.
3. The water flow sensor detects the water flow.
4. The computer initiates the fan motor and sends a signal to the igniter to create an ignition spark.
5. The gas ignites and flames appear within the burner chamber.
6. Water circulates through the heat exchanger and then gets hot.
7. Using thermistors to measure temperatures throughout the water heater, the computer modulates the gas and water valves to ensure proper output water temperature.

SAFETY GUIDELINES

SAFETY DEFINITIONS



DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates an imminently hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates an imminently hazardous situation which, if not avoided, could result in minor or moderate injury.

GENERAL

1. Follow all local codes, or in the absence of local codes, follow the most recent edition of the National Fuel Gas Code: ANSI Z223.1/NFPA 54 in the USA or CAN/CSA B149.1 Natural Gas, Propane Installation Code in Canada.
2. Properly ground the unit in accordance with all local codes or in the absence of local codes, with the National Electrical Codes: ANSI/NFPA 70 in the USA or CSA standard C22.1 Canada Electrical Code Part 1 in Canada.
3. Carefully plan where you intend to install the water heater. Please ensure:
 - ☐ Your water heater will have enough combustible air and proper ventilation.
 - ☐ Locate your heater where water leakage will not damage surrounding areas (please refer to p. 7).
4. Check the rating plate for the correct **GAS TYPE, GAS PRESSURE, WATER PRESSURE and ELECTRIC RATING**.
 *If this unit does not match your requirements, **do not install and consult with the manufacturer**.
5. If any problem should occur, turn off all hot water taps and turn off the gas. Then call a trained technician or the Gas Company or the manufacturer.



WARNING

- ☐ Water temperatures over 125°F (52°C) can cause severe burns instantly or death from scalding. The water temperature is set at 122°F (50°C) from the factory to minimize any scalding risk. Before bathing or showering always check the water temperature.
- ☐ Do not store or use gasoline or other flammables, vapors, or liquids in the vicinity of this appliance.
- ☐ Do not reverse the water and/or gas connections as this will damage the gas valves and can cause severe injury or death. Follow the diagram on p. 20 when installing your water heater.
- ☐ Do not use this appliance if any part has been in contact with or been immersed in water. Immediately call a licensed plumber, a licensed gas fitter, or a professional service technician to inspect and/or service the unit if necessary.
- ☐ Do not disconnect the electrical supply if the ambient temperature will drop below freezing. The Freeze Prevention System only works if the unit has electrical power. The warranty will not be covered if the heat exchanger is damaged due to freezing. Refer to the section on the Freeze Prevention System on p. 35 for more information.

INSTALLATION

GENERAL

1. Follow all local codes, or in the absence of local codes, follow the most recent edition of the National Fuel Gas Code: ANSI Z223.1/NFPA 54 in the USA or CAN/CSA B149.1 Natural Gas, Propane Installation Code in Canada.
2. All gas water heaters require careful and correct installation to ensure safe and efficient operation. This manual must be followed exactly. Read the “Safety Guidelines” section.
3. The manifold gas pressure is preset at the factory. It is computer controlled and should not need adjustment.
4. Maintain proper space for servicing. Install the unit so that it can be connected or removed easily. Refer to the Clearances Section on p. 8 for proper clearances.
5. The water heater must be installed in a location where the proper amount of combustible air will be available to it at all times without obstructions.
6. The electrical connection requires a means of disconnection, to terminate power to the water heater for servicing and safety purposes.
7. Do not install the unit where the exhaust vent is pointing into any opening in a building or where the noise may disturb your neighbors. Make sure the vent termination meets the required distance by local code from any doorway or opening to prevent exhaust from entering a building (refer to p. 15).
8. Particles from flour, aerosols, and other contaminants may clog the air vent or reduce the functions of the rotating fan and cause improper burning of the gas. Regularly ensure that the area around the unit is dust- or debris-free; regular maintenance is recommended for these types of environment.
9. If you will be installing the water heater in a contaminated area with a high level of dust, sand, flour, aerosols or other contaminants/chemicals, they can become airborne and enter and build up within the fan and burner causing damage to the water heater.
10. For the 110 Indoor (T-KJr2-IN), 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN) models:
 - ☐ These units may be converted to a direct-vent (sealed combustion) appliance by installing a direct-vent conversion kit Part No. 9007667005 (TK-TV10) which will bring in all required combustible air from outside the building. When installing the direct-vent conversion kit, please follow all instructions included with the kit.
 - ☐ If the water heater is used as a direct-vent appliance, the unit requires a 3” combustible air supply pipe. The intake pipe must be sealed airtight. Air supply pipe can be made of ABS, PVC, galvanized steel, corrugated aluminum, corrugated stainless steel or Category III stainless steel.
 - ☐ Terminating the venting through a sidewall is recommended for the direct-vent system.
 - ☐ Running the exhaust vent and the intake pipe parallel is recommended.
 - ☐ Terminating the exhaust and intake on the same wall / surface is recommended. Terminating in the same pressure zone allows for pressure balancing, which prevents nuisance shutdowns.
11. For the 110 Outdoor (T-KJr2-OS), 310 Outdoor (T-K4-OS) and 510 Outdoor (T-D2-OS) models:
 - ☐ To be installed outdoors and only in areas with mild, temperate climates.

**WARNING**

- ☐ Installation and service must be performed by a qualified installer (for example, a licensed plumber or gas fitter), otherwise the warranty will be void.
- ☐ The installer (licensed professional) is responsible for the correct installation of the water heater and for compliance with all national, state/provincial, and local codes.
- ☐ The manufacturer does not recommend installing the water heater in a pit or location where gas and water can accumulate.
- ☐ Do not have the vent terminal pointing toward any operating window, door, or opening into a building.
- ☐ Do not install next to any source of airborne debris, such as a clothes dryer, that can cause debris to be trapped inside the combustion chamber, unless the system is direct-vented.
- ☐ **The manufacturer does not recommend installing the water heater in an attic due to safety issues.** If you install the water heater in an attic:
 - ☐ Make sure the unit will have enough combustion air and proper ventilation.
 - ☐ Keep the area around the water heater clean. When dust collects on the flame sensor, the water heater will shut down on an error code.
 - ☐ If the above conditions cannot be met, use the direct vent conversion kit Part No. 9007667005 (TK-TV10).
 - ☐ Place the unit for easy access for service and maintenance.
 - ☐ A drain pan, or other means of protection against water damage, is required to be installed under the water heater in case of leaks.


**CAUTION**

- ☐ **The warranty will not cover damage caused by water quality.**
 - ☐ Only potable water or potable water / glycol mixtures can be used with this water heater. Do not introduce pool or spa water, or any chemically treated water into the water heater.
 - ☐ Water hardness levels must not exceed 7 grains per gallon (120 ppm) for single family domestic applications or more than 4 grains per gallon (70 ppm) for all other types of applications. Water hardness leads to scale formation and may affect/damage the water heater. Hard water scaling must be avoided or controlled by proper water treatment.
 - ☐ Water pH levels must be between 6.5 and 8.5
 - ☐ Well water must be treated.
- ☐ Do not install the unit where water, debris, or flammable vapors may get into the flue terminal.
- ☐ **The manufacturer recommends using the direct vent kit when the water heater is installed in a beauty salon.** Some chemicals used in a beauty salon may affect the flame sensor. Water heater may not work properly.
- ☐ Although the water heater is designed to operate with minimal sound, **the manufacturer does not recommend installing the unit on a wall adjacent to a bedroom, or a room that is intended for quiet study or meditation, etc.**
- ☐ Locate your heater close to a drain where water leakage will not do damage to surrounding areas. As with any water heating appliance, the potential for leakage at some time in the life of the product does exist. The manufacturer will not be responsible for any water damage that may occur. If you install a drain pan under the unit, ensure that it will not restrict the combustion air flow.

CLEARANCES



Maintain all clearances around the water heater.

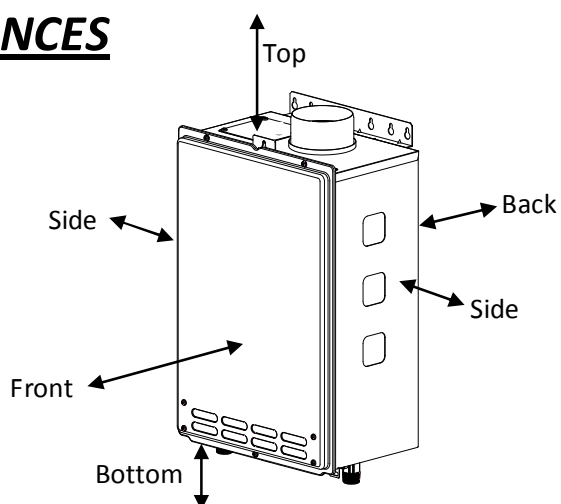

Model	Top	Bottom	Front	Back	Sides
110 Indoor* (T-KJr2-IN)*	12"	12"	24"	1"	2 "
110 Outdoor (T-KJr2-OS)	36"	12"	24"	1"	2 "




Model	Top	Bottom	Front	Back	Sides
310 Indoor* (T-K4-IN)*	12"	12"	24"	1"	2 "
310 Outdoor (T-K4-OS)	36"	12"	24"	1"	2 "

Model	Top	Bottom	Front	Back	Sides
510 Indoor* (T-D2-IN)*	12"	12"	24"	1"	2 "
510 Outdoor (T-D2-OS)	36"	12"	24"	1"	2 "

*Standard indoor installations and direct-vent indoor installations have the same clearances.

INCLUDED ACCESSORIES

Check that these items below are included with the water heater.

1. Installation Manual and Owner's Guide  Qty: 1	2. Product Registration Card  Qty: 1	3. Communication Cable 510 (T-D2) models only  Qty: 1
--	--	---

OPTIONAL ITEMS

Model	110 Indoor (T-KJr2-IN)	110 Outdoor (T-KJr2-OS)	310 Indoor (T-K4-IN)	310 Outdoor (T-K4-OS)	510 Indoor (T-D2-IN)	510 Outdoor (T-D2-OS)
9007666005 (TK-RE02)	✓	✓	✓	✓		
9007603005 (TM-RE30)					✓	✓
9007678005 (TK-BF01)	✓		✓		✓	
9007667005 (TK-TV10)	✓		✓		✓	
9007670005 (TK-PC01)			✓	✓	✓	✓
9007671005 (TK-PCJr2)	✓	✓				
9007674005 (TK-RB02)		✓		✓		✓
9007608005 (TK-KPWL4) 9007609005 (TK-KPWH4)	✓		✓		✓	
9007680005 (TK-KPCT43)	✓		✓		✓	

1. Temperature Remote Controller: 9007666005 (TK-RE02)



The Temperature Remote Controller has two functions. It allows the output temperature from the water heater to be adjusted within the range of 99 °F to 167 °F, and it also works as a diagnostic tool that will give a concise error code whenever there is a problem with the unit. The temperature options are 99°F, 100°F, 102°F, 104°F, 106°F, 108°F, 109°F, 111°F, 113°F, 115°F, 117°F, 122°F, 131°F, 140°F, 158°F, and 167°F. See the trouble shooting section for information on possible error codes.

2. Temperature Remote Controller: 9007603005 (TM-RE30)



The Temperature Remote Controller has two functions. It allows the output temperature from the water heater to be adjusted within the range of 99 °F to 185 °F, and it also works as a diagnostic tool that will give a concise error code whenever there is a problem with the unit. The temperature options are 99°F, 100°F, 102°F, 104°F, 106°F, 108°F, 110°F, 111°F, 113°F, 115°F, 117°F, 122°F, 131°F, 140°F, 149°F, 158°F, 167°F, 176°F and 185°F. See the trouble shooting section for information on possible error codes.

3. Backflow Preventer: 9007678005 (TK-BF01)



The Backflow preventer prevents the backflow of air through the exhaust vent. This helps prevent harmful exhaust gases from entering the home, as well as helping to prevent the unit from freezing in areas where cold air can be blown or drawn into the exhaust system. Install this vent damper in accordance with the installation instructions and any applicable codes.

4. Direct-Vent Conversion Kit: 9007667005 (TK-TV10)



This kit can be used to convert the water heater from a standard vent system to a direct-vent (or sealed combustion) system. Install this conversion kit in accordance with the installation instructions and any applicable codes.

5. Pipe Covers: 9007670005 (TK-PC01) and 9007671005 (TK-PCJr2)



The pipe cover protects the plumbing pipes to the water heater from unexpected adjustments. This pipe cover is fixed to the bottom of the water heater, which hides the plumbing and improves the visual aspects of the whole installation for the water heater.

6. Recess box: 9007674005 (TK-RB02)



The Recess box will allow for “clean” installations. The water heater fits inside the recess box, which hides and protects the whole water heater and plumbing. The Recess box will fit in-between most wall studs.

7. T-Vent Wall Thimble with Termination: 9007608005 (TK-KPWL4) and 9007609005 (TK-KPWH4)



**Louver
Termination
9007608005
(TK-KPWL4)**



**Hood
Termination
9007609005
(TK-KPWH4)**

These terminations are used when venting out through the wall and are compatible with the T-Vent pipe system. These terminations are special stainless steel vents for gas appliances and are UL listed as Category II, III and IV. There are two types of terminations: the Louver termination and the Hood termination. For different wall thicknesses, there are two ranges of lengths available (refer to the venting brochure for details). Install these vent terminations in accordance with their installation instructions and any applicable local codes.

8. Direct-Vent Concentric Termination: 9007680005 (TK-KPCT43)






Used when terminating direct-vent (sealed-combustion) systems, with direct-vent models that require a 3” intake and a 4” exhaust. This concentric termination provides the convenience of only having to make one penetration through a sidewall instead of two separate penetrations for the intake and exhaust piping. The termination includes a bird screen, restricting small animals, pests, and foreign objects from entering into the vent system. This sidewall termination is available in three different sizes, to cover all ranges of wall thicknesses.

Direct-vent Concentric Termination	
Part#	Covering wall thickness
9007680005 (TK-KPCT43-1)	3.9” – 7.1”
9007772005 (TK-KPCT43-2)	6.9” – 10.1”
9007773005 (TK-KPCT43-3)	9.8” – 13.0”




HIGH-ALTITUDE INSTALLATIONS

Check the elevation where your water heater is installed. Set dipswitches shown in the table below depending on the altitude.


110 (T-KJr2) and 310 (T-K4) models

Altitude	0 to 2,000 ft (DEFAULT)	2,000 to 4,000 ft	4,000 to 6,000 ft	Over 6,000 ft
Switch No.3	OFF	ON	OFF	Consult our Technical Services Department at 1-877- 737-2840
Switch No.4	OFF	OFF	ON	
				


510 (T-D2) models (Left bank of dipswitches)

Altitude	0 to 2,000 ft (DEFAULT)	2,000 to 4,000 ft	4,000 to 6,000 ft	Over 6,000 ft
Switch No.4	OFF	ON	OFF	Consult our Technical Services Department at 1-877- 737-2840
Switch No.5	OFF	OFF	ON	
				

110 (T-KJr2) and 310 (T-K4) models Computer board

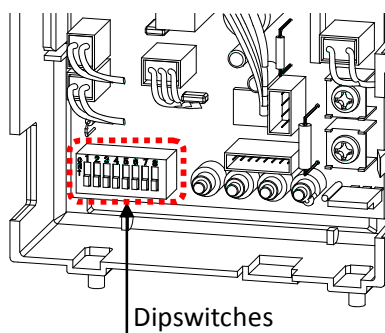

510 (T-D2) models Computer board

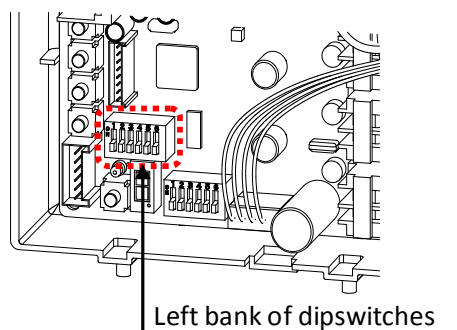

- ❑ **DO NOT** adjust any dipswitches on the right bank for the **510 (T-D2)** models.
- ❑ The dark squares indicate the direction the dipswitches should be set to.

VENTING INSTRUCTIONS

-General-



Improper venting of this appliance can result in excessive levels of carbon monoxide which can result in severe personal injury or death.

Improper installation can cause nausea or asphyxiation, severe injury or death from carbon monoxide and flue gases poisoning. Improper installation will void product warranty.



When installing the vent system, all applicable national and local codes must be followed. If you install thimbles, fire stops or other protective devices and they penetrate any combustible or noncombustible construction, be sure to follow all applicable national and local codes.

The water heater must be vented in accordance with the section "Venting of Equipment" of the latest edition of the National Fuel Gas Code: ANSI Z223.1/NFPA 54 in the United States and/or Section 7 of the CAN/CSA B149.1 Natural Gas and Propane Installation Code in Canada, as well as applicable local building codes.

The manufacturer recommends the "T-Vent" line manufactured by TAKAGI (Refer to "T-Vent" brochure for details). However, the following are also UL listed manufacturers: ProTech Systems Inc. (FasNSeal), Flex-L Inc., Z-Flex Inc. (Z-Vent III), Metal-Fab Inc., and Heat-Fab Inc. (Saf-T Vent).

General rules for venting water heaters are:

- ☐ Place the water heater as close as possible to the vent terminator.
- ☐ The vent collar of the water heater must be fastened directly to an unobstructed vent pipe.
- ☐ Do not weld the vent pipe to the water heater's vent collar.
- ☐ Do not cut the vent collar of the unit.
- ☐ The vent must be easily removable from the top of the water heater for normal service and inspection of the unit.
- ☐ The water heater vent must not be connected to any other gas appliance or vent stack.
- ☐ Avoid using an oversized vent pipe or using extremely long runs of the pipe.
- ☐ For rooftop venting, a rain cap or other form of termination that prevents rain water from entering into the water heater must be installed.
- ☐ Do not common vent or connect any vent from other appliances to the water heater vent.

General rules for vent terminations:

- ☐ Avoid locating the water heater vent terminator near **any air intake devices**. These fans can pick up the exhaust flue products from the water heater and return them to the building. This can create a health hazard.
- ☐ Locate the vent terminator so that it cannot be blocked by any debris, at any time. Most codes require that the terminator be at least 12 inches above grade, but the installer may determine if it should be higher depending on the job site condition and applicable codes.
- ☐ A proper sidewall terminator is recommended when the water heater is vented through a sidewall.
- ☐ Regarding the clearances from the exhaust terminator to the air inlet or opening, refer to the next few pages.

-Exhaust venting-
For the 110 Indoor (T-KJr2-IN), 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN) models

This is a Category III appliance and must be vented accordingly. The vent system must be sealed air tight. All seams and joints **without gaskets** must be sealed with high heat resistant silicone sealant or UL listed aluminum adhesive tape having a minimum temperature rating of 350°F. For best results, a vent system should be as short and straight as possible.

- ☐ This water heater is a Category III appliance and must be vented accordingly with any 4" vent approved for use with Category III or Special BH type gas vent.
- ☐ **Follow the vent pipe manufacturer's instructions when installing the vent pipe.**
- ☐ **Do not common vent this appliance with any other vented appliance** (Do not terminate vent into a chimney. If the vent must go through the chimney, the vent must run all the way through the chimney with Category III approved or Special BH vent pipe).
- ☐ When the horizontal vent run exceeds 5 ft., support the vent run at 3 ft. intervals with overhead hangers.
- ☐ The maximum length of exhaust vent piping must not exceed 50 ft. (deducting 5 ft. for each elbow used in the venting system). Do not use more than 5 elbows.

Diameter	Max. No. of Elbow	Max. Vertical and Horizontal (Total) Vent Length
4"	5	50 ft.


*For each elbow added, deduct 5 ft. from max. Vent length.

No. of Elbows	Max. Vertical or Horizontal Length
0	50 ft.
1	45 ft.
2	40 ft.
5	25 ft.


-Venting Illustrations-
For the 110 Indoor (T-KJr2-IN), 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN) models

For details of the optional items, refer to the Installation manual for each Optional item.


Horizontal Installation Diagram

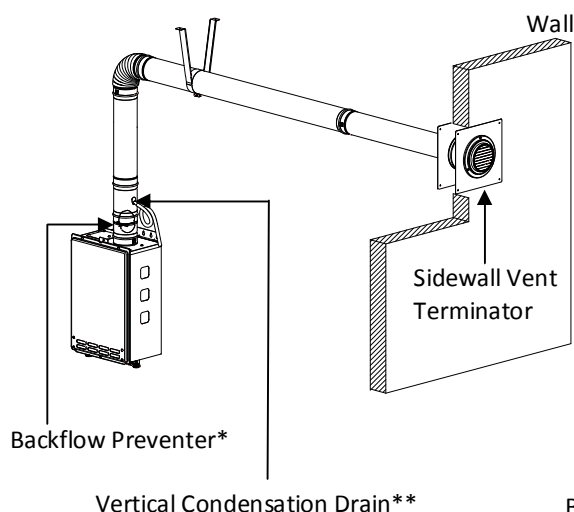


Vertical Installation Diagram

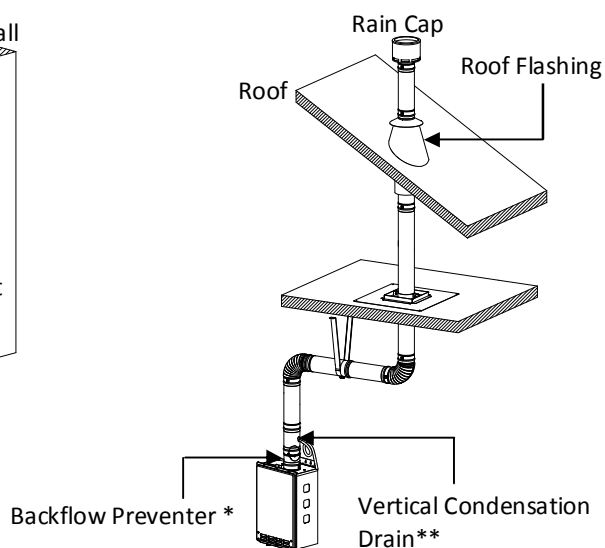

Horizontal Installation Diagram (With direct-venting)

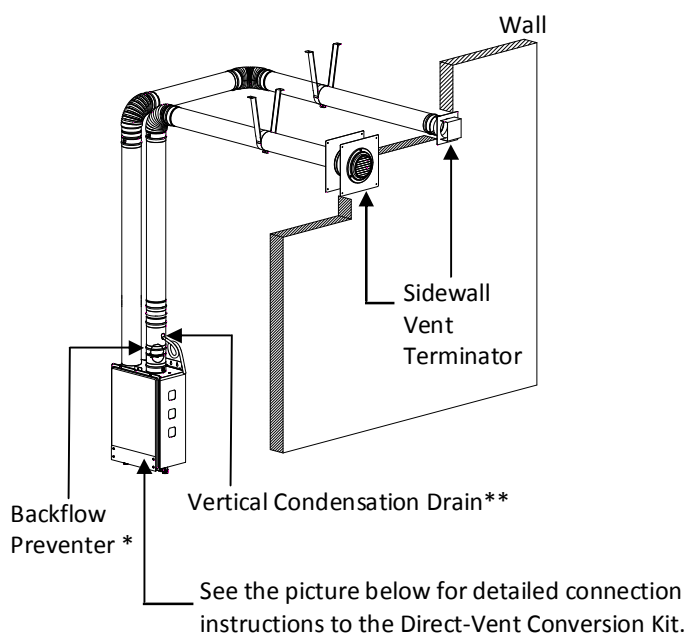


Vertical Installation Diagram (With direct-venting)

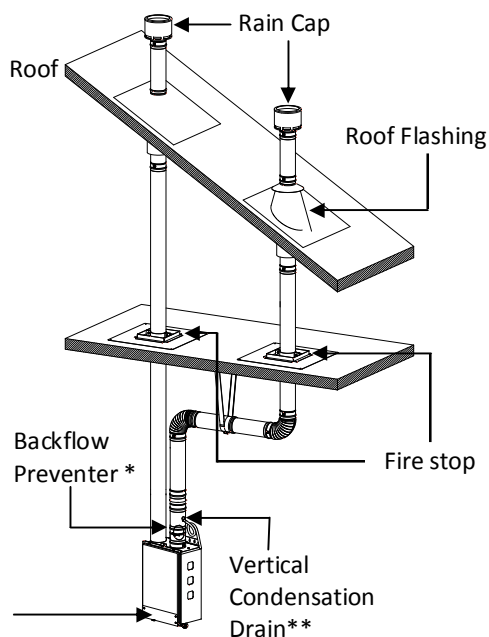


*Backflow Preventer (Recommended for freezing weather conditions: 36°F and below)

**Vertical Condensation Drain must be installed accordance with local codes.


Horizontal Installation Diagram With Direct-Vent Concentric Termination

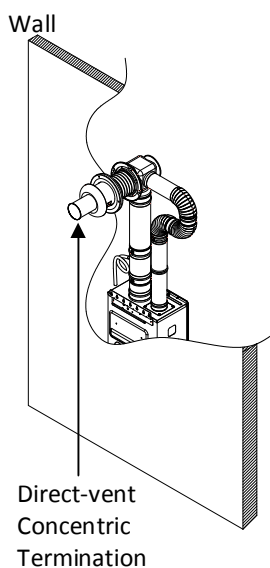

Installation Diagram of Direct-Vent Conversion Kit with water heater

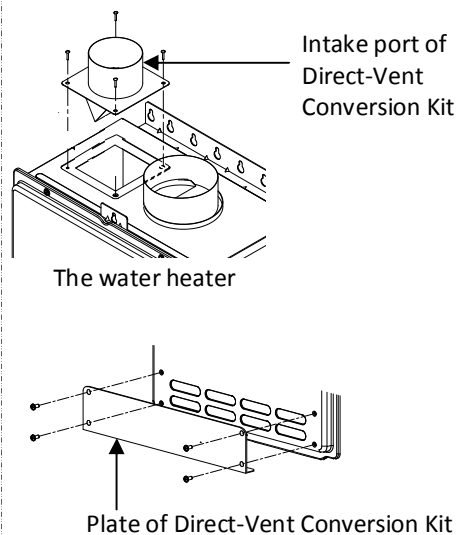

-Vent termination clearances-

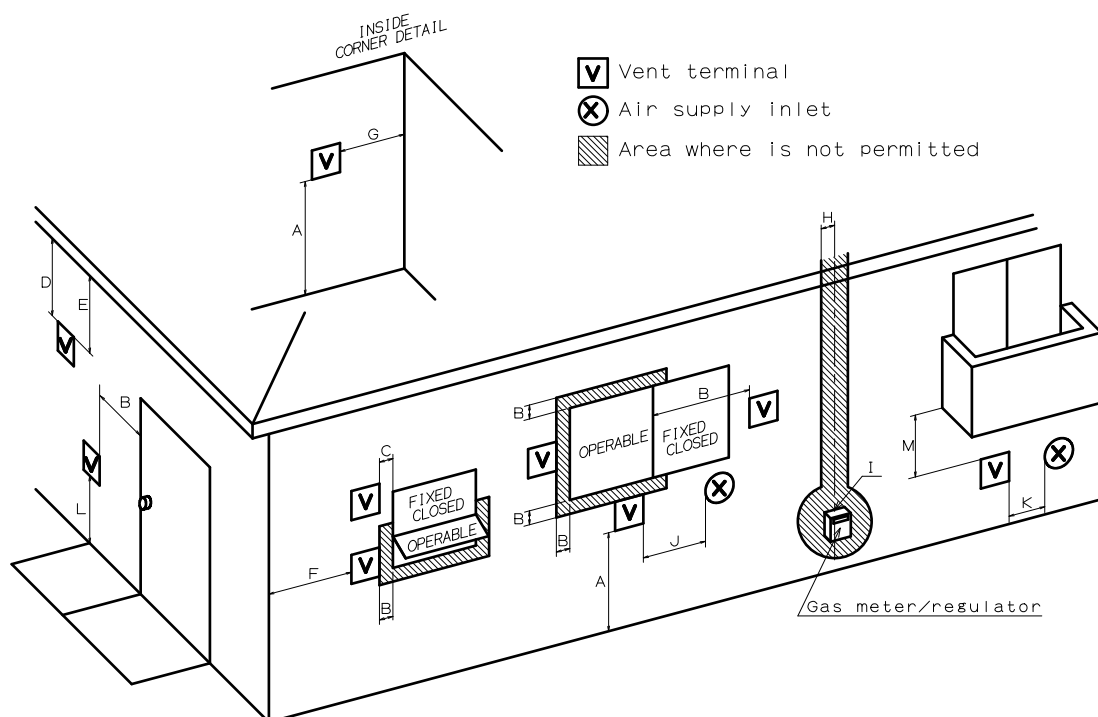


		Canada	U.S.A	
		Direct vent and other than Direct Vent	Direct vent	Other than Direct Vent
A	Clearance above grade, veranda, porch, deck, or balcony.	1 foot	1 foot	1 foot
B	Clearance to window or door that may be opened.	3 feet	1 foot	4 feet from below or side opening. 1 foot from above opening.
C	Clearance to permanently closed window	*	*	*
D	Vertical clearance to ventilated soffit located above the vent terminator within a horizontal distance of 2 feet (61cm) from the center line of the terminator.	*	*	*
E	Clearance to unventilated soffit	*	*	*
F	Clearance to outside corner	*	*	*
G	Clearance to inside corner	*	*	*
H	Clearance to each side of center line extended above meter/regulator assembly	3 feet	*	*
I	Clearance to service regulator vent outlet.	3 feet	*	*
J	Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other application.	3 feet	1 foot	4 feet from below or side opening. 1 foot from above opening.
K	Clearance to mechanical air supply inlet.	6 feet	3 feet	3 feet
L	Clearance above paved sidewalk or paved driveway located on public property.	7 feet	*	7 feet
M	Clearance under veranda, porch deck, or balcony.	1 foot	*	*
*For clearances not specified in ANSI Z223.1 / NFPA 54 or CAN/CSA-B149.1, please use clearances in accordance with local installation codes and the requirements of the gas supplier.				




Please follow all local and national codes in regards to proper termination clearances. In the absence of such codes, the following clearances can be used as guidelines. Local codes supersede these guidelines.


For sidewall terminations

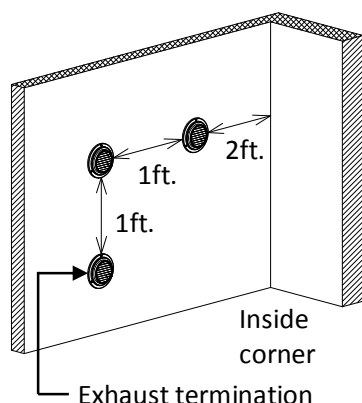


For multiple sidewall exhaust terminations (e.g. multi-unit systems), an exhaust termination must be at least 1 ft. away from another exhaust termination. An exhaust termination must also be at least 2 ft. away from an inside corner (if the adjacent wall is less than 2 ft. of length, the minimum required distance away from the inside corner will be equal to the length of that adjacent wall).

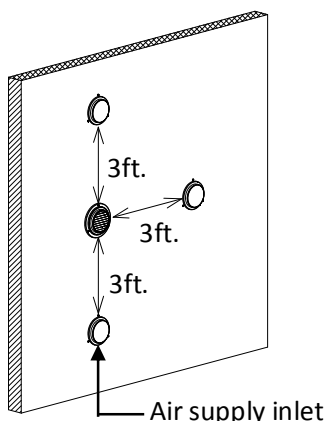

For direct-vent sidewall terminations that use two separate penetrations for the intake and exhaust, distance the intake and exhaust terminations at least 3 ft. away from each other, no matter the orientation.

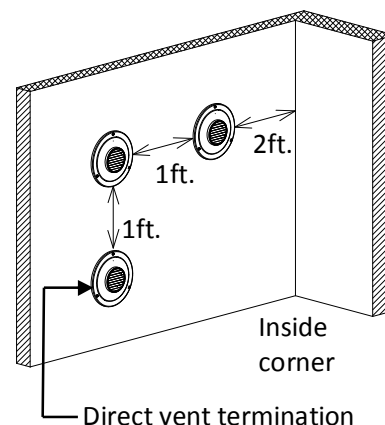


For multiple-unit, direct-vent sidewall terminations that combine the intake and exhaust into a single penetration, space each direct-vent termination at least 1 ft. away from each other, no matter the orientation. A direct-vent termination must also be at least 2 ft. away from an inside corner (if the adjacent wall is less than 2 ft. of length, the minimum required distance away from the inside corner will be equal to the length of that adjacent wall).

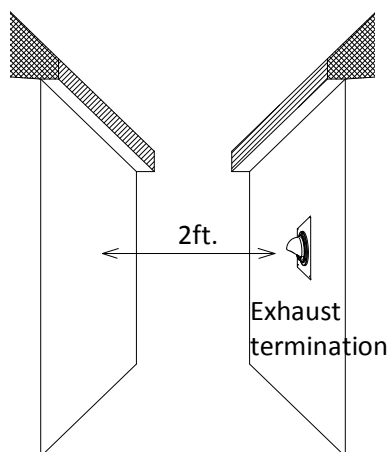


Exhaust and/or direct-vent sidewall terminations should be at least 2 ft. away from an opposite surface/wall. Do not place the termination directly in front of an opening into a building.

For rooftop terminations

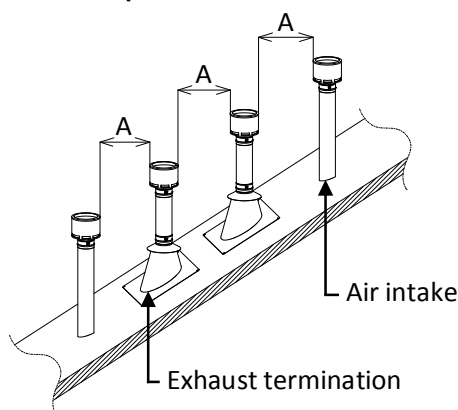

A: In accordance with local codes

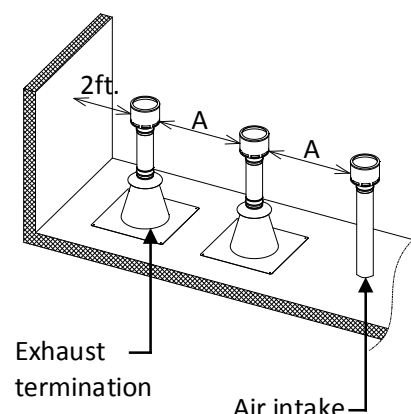

For multiple-unit rooftop terminations (whether for standard indoor or direct-vent installations) space all exhaust and intake terminations in accordance with local codes. An exhaust termination must be spaced from a wall or surface in accordance with local codes as well. In the absence of such a code, an exhaust termination must be a horizontal distance of at least 2 ft. away from a wall or surface.

GAS SUPPLY AND GAS PIPE SIZING

-General-



- ☐ Check that the type of gas matches the rating plate first.
- ☐ Ensure that any and all gas regulators used are operating properly and providing gas pressures within the specified range shown below. Excess gas inlet pressure may cause serious accidents.
- ☐ Conversion of this unit from natural gas to propane or vice versa will void all warranty. Contact your local distributor to get the correct unit for your gas type. **The manufacturer is not liable for any property and/or personal damage resulting from gas conversions.**

- ☐ The minimum and maximum inlet gas pressures are:

Gas type	Inlet gas pressure
Natural Gas	Min. 5.0" WC – Max. 10.5" WC
Propane	Min. 8.0" WC – Max. 14.0" WC

- ☐ Gas pressure above this specified range for the water heater and/or insufficient gas volume will adversely affect performance. These pressures are measured when the water heater is in full operation.
- ☐ Inlet gas pressure must not exceed the above maximum values; gas pressure above the specified range will cause dangerous operating conditions and damage to the unit.
- ☐ Until testing of the main gas line supply pressure is completed, ensure the gas line to the water heater is disconnected to avoid any damage to the water heater.

-Gas connections-

1. Install a manual gas shut-off valve between the water heater and the gas supply line.
2. When the gas connections are completed, it is necessary to perform a gas leak test (see below) either by applying soapy water to all gas fittings and observing for bubbles or by using a gas leak detection device.
 - ☐ The water heater and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5 kPa).
 - ☐ The water heater must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5kPa).
3. Always purge the gas line of any debris and/or water before connecting to the gas inlet.

NOTICE

Size the gas pipe appropriately to supply the necessary volume of gas required for the water heater using ANSI233.1/NFPA 54 in the USA or CAN/CSA B149.1 in Canada or local codes. Otherwise, flow capabilities and output temperatures will be limited.

-Natural Gas Supply Piping-

Maximum Delivery Capacity of Cubic Feet of Gas per Hour of IPS Pipe Carrying Natural Gas of 0.60 Specific Gravity Based on Pressure Drop of 0.5" WC

Based on Energy Content of 1,000 BTU/Cubic Ft.: The water heater requires 140 Cubic Ft./hr for the 110 (T-KJr2) models, 190 Cubic Ft./hr for the 310 (T-K4) models, and 199 Cubic Ft./hr for the 510 (T-D2) models.

Unit: Cubic Feet per Hour

Pipe Size	Length												
Diameter	10'	20'	30'	40'	50'	60'	70'	80'	90'	100'	125'	150'	200'
¾"	363	249	200	171	152	138	127	118	111	104	93	84	72
1"	684	470	377	323	286	259	239	222	208	197	174	158	135
1 ¼"	1,404	965	775	663	588	532	490	456	428	404	358	324	278
1 ½"	2,103	1,445	1,161	993	880	798	734	683	641	605	536	486	416
2"	4,050	2,784	2,235	1,913	1,696	1,536	1,413	1,315	1,234	1,165	1,033	936	801

-Propane (LP) Supply Piping-


Maximum Capacity of Propane (LP) Based on 11" WC supply pressure at a 0.5" WC pressure drop

Unit: kBtu per Hour

Pipe Size	Length												
Diameter	10'	20'	30'	40'	50'	60'	70'	80'	90'	100'	125'	150'	200'
¾"	567	393	315	267	237	217	196	185	173	162	146	132	112
1"	1,071	732	590	504	448	409	378	346	322	307	275	252	213
1 ¼"	2,205	1,496	1,212	1,039	913	834	771	724	677	630	567	511	440
1 ½"	3,307	2,299	1,858	1,559	1,417	1,275	1,181	1,086	1,023	976	866	787	675
2"	6,221	4,331	3,465	2,992	2,646	2,394	2,205	2,047	1,921	1,811	1,606	1,496	1,260

For more information, please see the below.

Gas Sizing Example (Natural Gas)

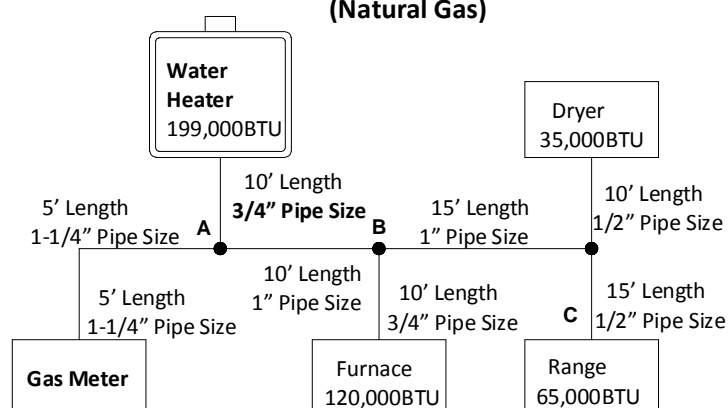

Based on Energy Content of 1,000 BTU/Cubic Ft:

Divide each appliance's BTU requirement by 1,000 BTU to get the appliances Cubic Ft. requirement.


Take into account the distance the appliance is from the gas meter, look in the above gas chart to properly size the line.

For sections of the gas line supplying gas to more than one appliance (Ex: Point A to Point B), add up the cubic ft. requirements of the appliances that are being supplied by that section, and size to the farthest appliance.

For Example: The section from A to B supplies gas to the furnace, range, and dryer. Adding up the BTU requirements and dividing by 1,000 yields a cubic ft. requirement of 220 cubic ft. of gas. The farthest appliance is the range, which is 50 ft. away from the meter. Looking at the above chart, and under the column of 50ft., Section A to B needs to be 1" in order to supply 220 cubic ft.


-Measuring inlet gas pressure-



1. Turn off all electric power to the water heater if service is to be performed.
2. Turn the manual gas valve located on the outside of the unit clockwise  to the off position.

The water heater cannot perform properly without sufficient inlet gas pressure. Below are instructions on how to check the inlet gas pressure. **THIS IS ONLY TO BE DONE BY A LICENSED PROFESSIONAL.**

1. Shut off the manual gas valve on the supply gas line.
2. Remove the screw for the pressure port located on the gas inlet of the water heater shown in the diagram to the right.
3. Connect the manometer to the pressure port.
4. Re-open the manual gas valve. Check to see that there are no gas leaks. Open some of the fixtures that use the highest flow rate to turn on the water heater.
5. Check the inlet gas pressure. When the water heater is on maximum burn, the manometer should read from 5.0" to 10.5" WC for Natural gas, from 8.0" to 14.0" WC for Propane.

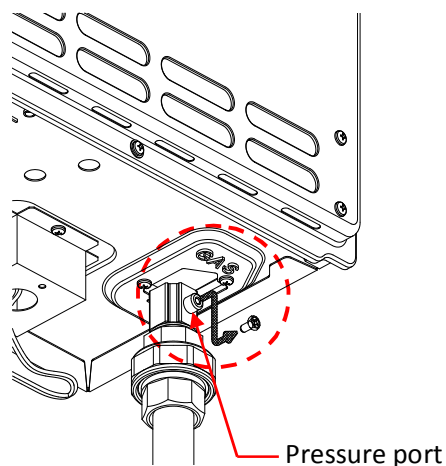


WATER CONNECTIONS



- ☐ Do not use this water heater if any part has been submersed under water. Immediately call a licensed professional to inspect the water heater to replace any damaged parts.
- ☐ Do not reverse the hot outlet and cold inlet connections to the water heater. This will not properly activate the water heater.

All pipes, pipe fittings, valves and other components, including soldering materials, must be suitable for potable water systems.

1. A manual shut off valve must be installed on the cold water inlet to the water heater between the main water supply line and the water heater.
2. In addition, a manual shut off valve is also recommended on the hot water outlet of the unit. If the water heater is installed within, or subjected to, a closed loop water system, a thermal expansion tank must be installed.
3. Before installing the water heater, flush the water line to remove all debris, and after installation is complete, purge the air from the line. Failure to do so may cause damage to the heater.
4. There is a wire mesh filter within the cold inlet to trap debris from entering your heater. This will need to be cleaned periodically to maintain optimum flow.

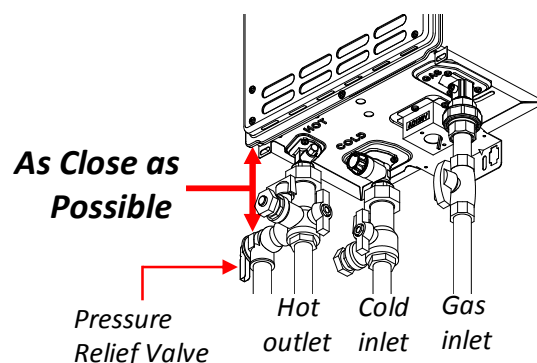

-Pressure relief valve-

The water heater has a high-temperature shut off switch built in as a standard safety feature (called a Hi-Limit switch) therefore a **“pressure only”** relief valve is required.

- ☐ This unit does not come with an approved pressure relief valve.
- ☐ An approved pressure relief valve must be installed on the hot water outlet.
- ☐ The pressure relief valve must conform to ANSI Z21.22 or CAN 1-4.4 and installation must follow local code.
- ☐ The discharge capacity must be at least 140,000 BTU/h for the 110 (T-KJr2) models, 190,000 BTU/h for the 310 (T-K4) models, and 199,000 BTU/h for the 510 (T-D2) models.
- ☐ The pressure relief valve needs to be rated for a maximum of 150 psi.
- ☐ The discharge piping for the pressure relief valve must be directed so that the hot water cannot splash on anyone or on nearby equipment.
- ☐ Attach the discharge tube to the pressure relief valve and run the end of the tube to within 6" from the floor. This discharge tube must allow free and complete drainage without any restrictions.
- ☐ If the pressure relief valve installed on the water heater discharges periodically, this may be due to a defective thermal expansion tank or defective pressure relief valve.
- ☐ The pressure relief valve must be manually operated periodically to check for correct operation.
- ☐ No valve must be placed between the relief valve and the water heater.

ELECTRICAL CONNECTIONS




Follow the electrical code requirements of the local authority having jurisdiction. In the absence of such requirements, follow the latest edition of the National Electrical Code ANSI/NFPA 70 in the U.S. or the latest edition of CSA C22.1 Canadian Electrical Code, Part 1, in Canada.



When servicing or replacing parts within the water heater, label all wires prior to disconnection to facilitate an easy and error-free reconnection. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

1. The water heater must be electrically grounded. Do not attach the ground wire to either the gas or the water piping.
2. The water heater requires **120 VAC / 60 Hz electrical power supply that is properly grounded.**
 - ☐ A proper disconnect (i.e. on/off switch, power plug, etc.) controlling the main power to the water heater must be provided for service reasons. (Must comply with local codes).
 - ☐ Connect the power supply to the water heater exactly as shown in the wiring diagram;
3. A green screw is provided in the junction box to ground the connection.
4. Can be hardwired or wired to a plug-in.
5. The use of a surge protector is recommended in order to protect the unit from power surges.

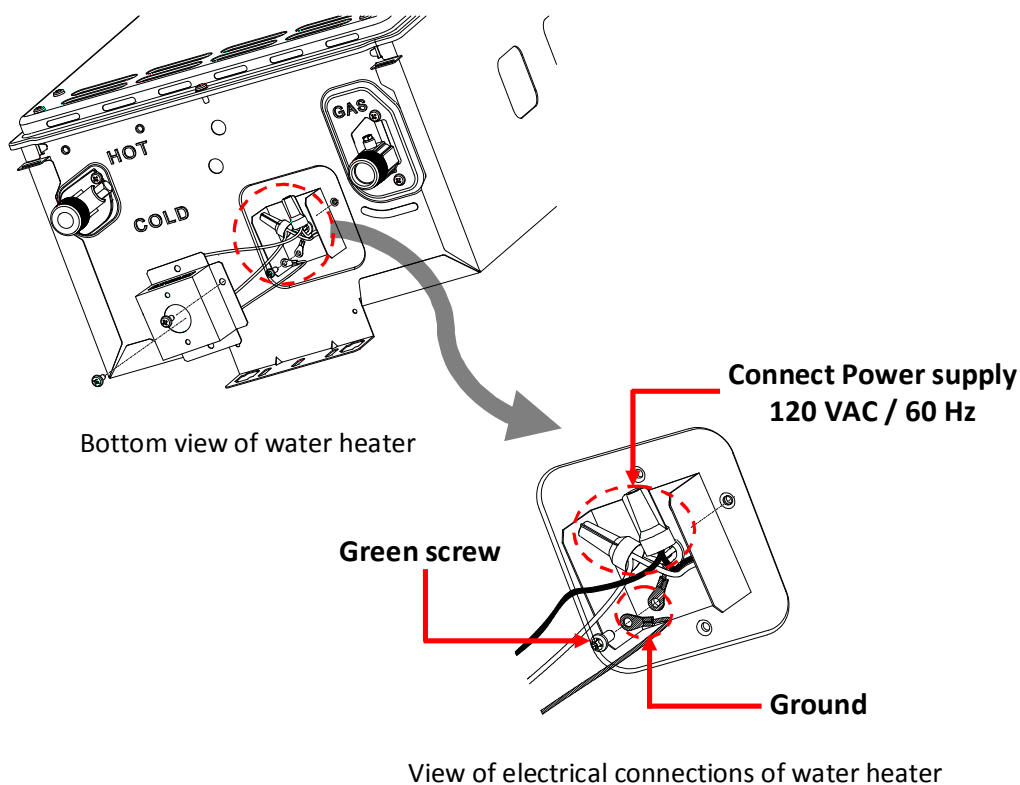

REMOTE CONTROLLER CONNECTIONS

<How to connect the remote controller to the water heater>


1. Disconnect power supply from the water heater.
2. Take off the water heater's front cover.
3. Locate the remote controller terminal, pictured below (located around the lower right-hand side of the computer board).
4. Open the plastic cover of the remote controller, and then attach the two fork terminals to connector base of the backside the remote controller with two screws. Make sure the terminals are firmly fixed.
5. Pull the remote's wires through the hole at the bottom of the water heater's casing.
6. Properly attach the remote's wires to the remote controller terminal on the computer board.
(No polarity)

***Do NOT jump or short-circuit the wires or computer will be damaged.**


7. Replace Front Cover securely.
8. Wires used for the remote controller connection must be:
 - ☐ Minimum 18AWG wire (No polarity)
 - ☐ Maximum 400 feet long

*For detailed connection instructions to the remote controller, refer to the instructions that are packaged with the remote controller.

110 (T-KJr2) and 310 (T-K4) models

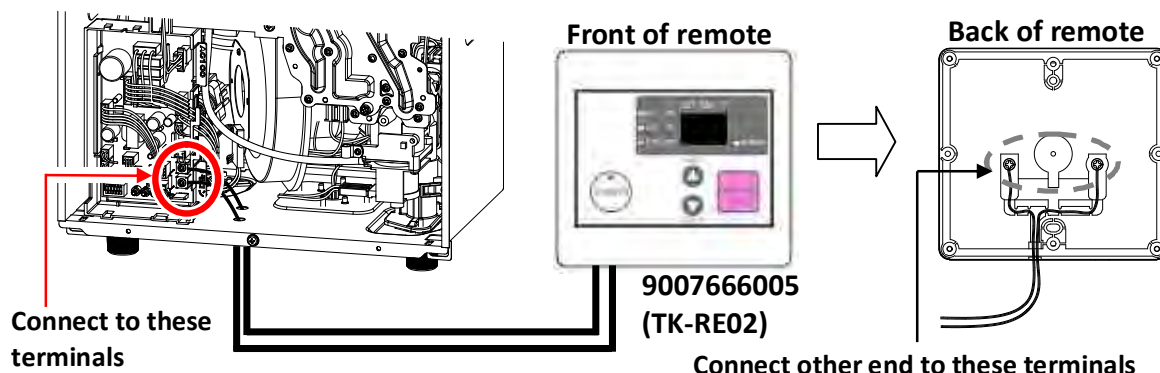

510 (T-D2) models

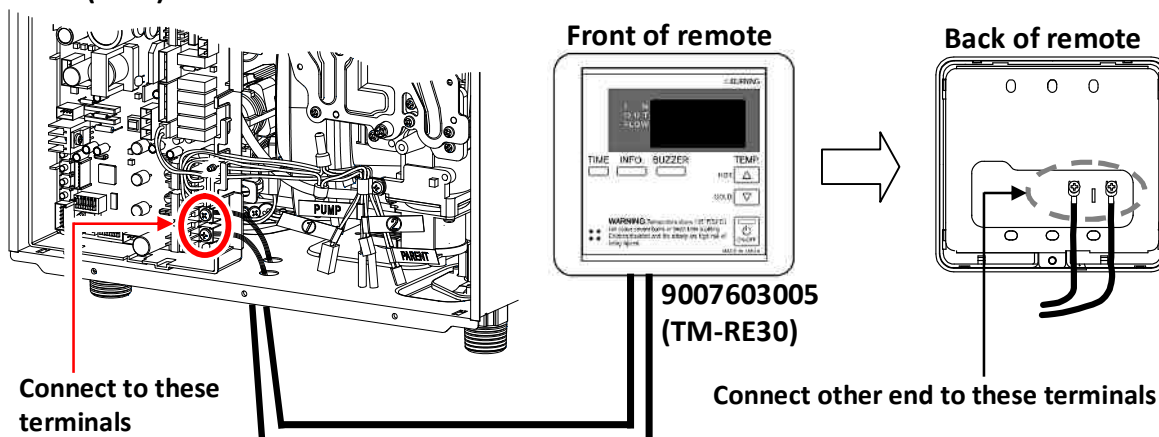

PUMP CONTROL CONNECTIONS

Available on the 510 (T-D2) models only

The 510 (T-D2) models water heaters can be used to control a recirculation pump. **Proper pump control helps to preserve the life of the system and saves energy as well.**


The water heater pump control port is a “**normally open dry contact**”, and therefore needs additional components to properly control a recirculation pump. To control a recirculation pump, connect the pump to the “**Pump**” connector in the water heater as shown in the diagram below. (In an Easy-Link system, connect the pump **ONLY** to the “**PARENT**” unit.) The pump is to be connected using suitable relays shown in the diagram below.

Please make sure the relays are properly rated for the recirculation pump.

Using the water heater’s internal thermistors as a temperature control, the recirculation pump will only turn on when recirculation is needed.



In an Easy-Link system, the pump must be connected to the “Pump” connector in the “PARENT” unit only. If the pump is connected to any of the “CHILD” units, the pump will not work.

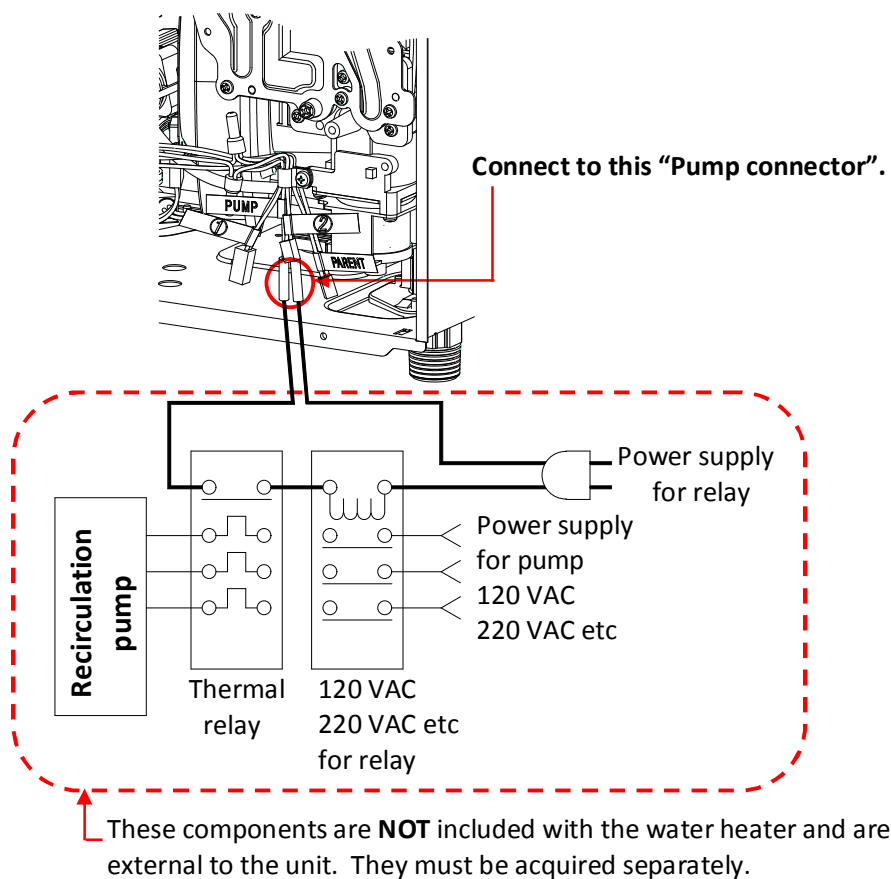

EASY-LINK SYSTEM


Available on the 510 (T-D2) models only

-General-

The 510 (T-D2) models water heaters can be connected with other heaters of the **same model** with communication cables to work as a multiple-unit manifold system.

- ☐ The Easy-Link system allows up to 4 units to manifold together.
- ☐ A communication cable (gray color) comes with each 510 (T-D2) models.

You can manifold from 2 to 4 units without the need for a multi-system controller. A 4-unit system has full automatic modulation between 11,000 BTU/h and 796,000 BTU/h.

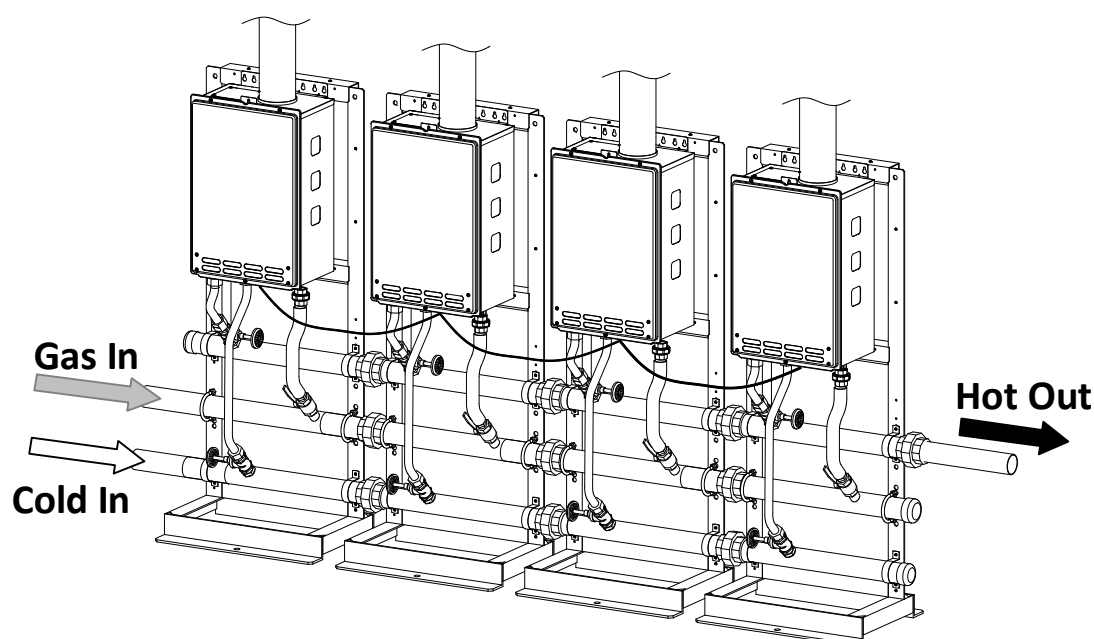

CAUTION

- ☐ The Easy-Link system is limited up to **4 units**. If you connect more than 4 units, only the first 4 units will work as a part of the Easy-Link system. The other additional units will not work.
- ☐ **All units within an Easy-Link System must be of the same exact model. Different models cannot combine together to form an Easy-Link System.**

-Easy-Link Connection Procedures-

1. Verify the set temperatures of all units within the system. Every single water heater must be set to the same set temperature.
2. Select one unit to be the “**PARENT**” unit.
3. “**PARENT**” unit

Locate the two banks of dipswitches to the right of the 7-seg. LED on the computer board of the unit that you select to be the “**PARENT**” unit. Change dipswitch No. 1 on the **right bank of dipswitches to the ON position**. See the computer board diagram as shown in the next page. Do not change any dipswitches on any of the “**CHILD**” units.

4. Between the “PARENT” and the “CHILD-1” units

Connect the “PARENT” connector of the “PARENT” unit to the “[1]” connector of the “CHILD-1” unit.

5. Between the “CHILD-1” and the “CHILD-2” units

Connect the “[2]” connector of the “CHILD-1” unit to the “[1]” connector of the “CHILD-2” unit.


6. Between the “CHILD-2” and the “CHILD-3” units

Connect the “[2]” connector of the “CHILD-2” unit to the “[1]” connector of the “CHILD-3” unit.


7. Make sure the 7-seg. LED of all the units’ computer boards display the unit #. The numbering system automatically allocates the unit # to each water heater in the Easy-Link system, in accordance with the table below.

Parent unit	Unit # : 1
Child units	Unit # : 2, 3 and 4

(A) 510 (T-D2) models Computer board

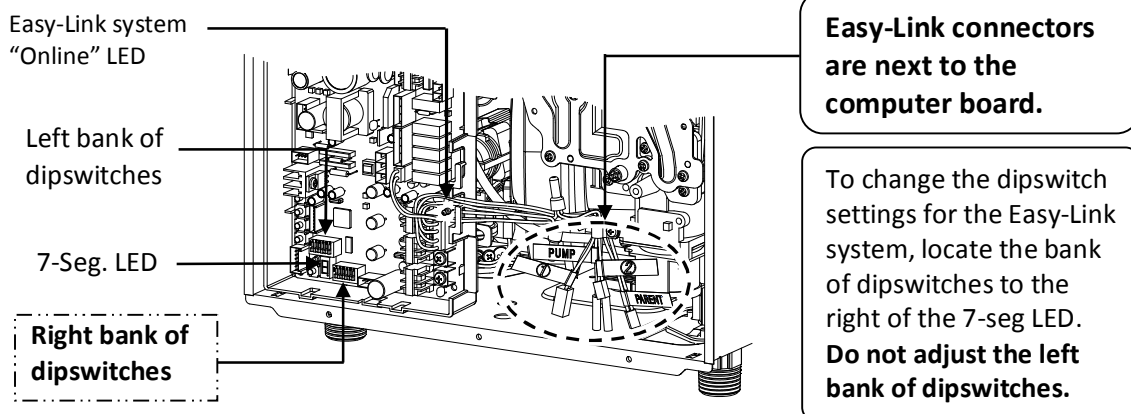

(B) Basic diagram of connections between the Easy-Link System units.

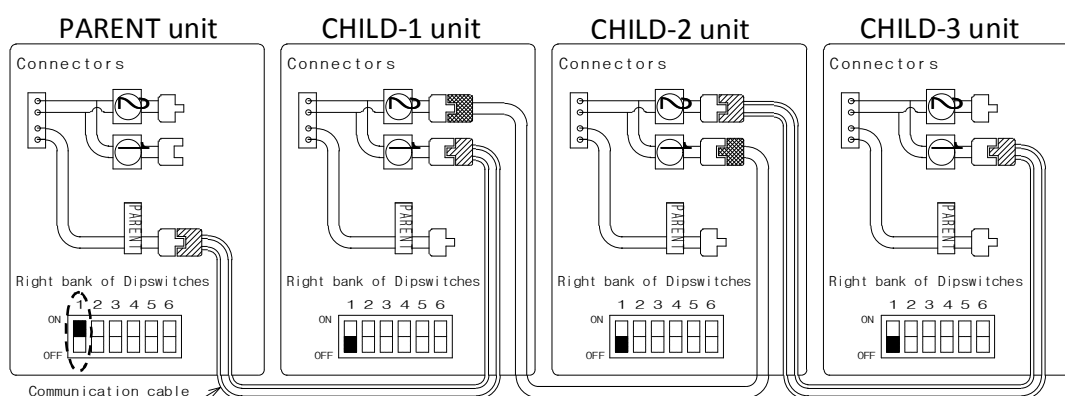

The dark squares indicate the direction the dipswitches should be set to.


NOTICE

- A remote controller is not required for the Easy-Link system.
- If running the Easy-Link system without a remote controller, please make sure the temperature settings on ALL the units are set to the same settings. Otherwise, the units will not operate properly.
- If a remote controller is used, the temperature on all the units in the system will automatically be set to the same temperature that is set on the remote.

(C) Examples of incorrect settings and/or connections


CASE 1:

- Unless you change dipswitch No.1 of the **“PARENT”** unit to the **“ON”** position, the system will not work as an Easy-Link system. The units will operate as individual units.

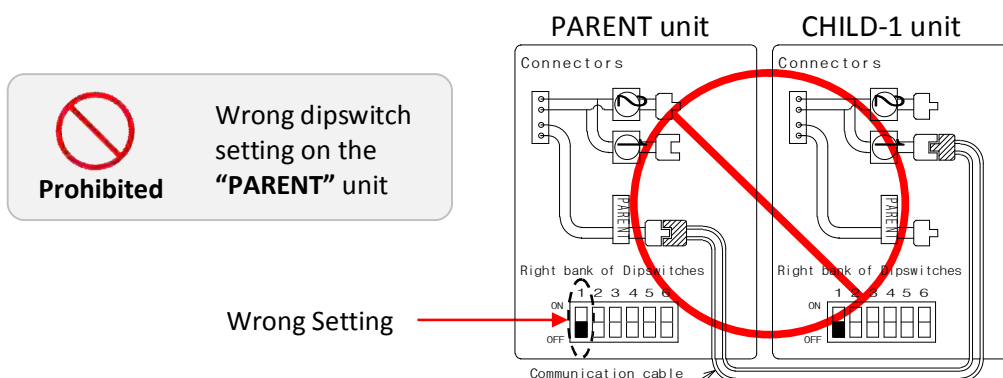


CASE 2:

- If you connect the **“[1] (or [2])”** connector of the **“PARENT”** unit to the **“PARENT (or [1])”** connector of the **“CHILD-1”** unit, the system will not work as an Easy-link system. The units will operate as individual units.

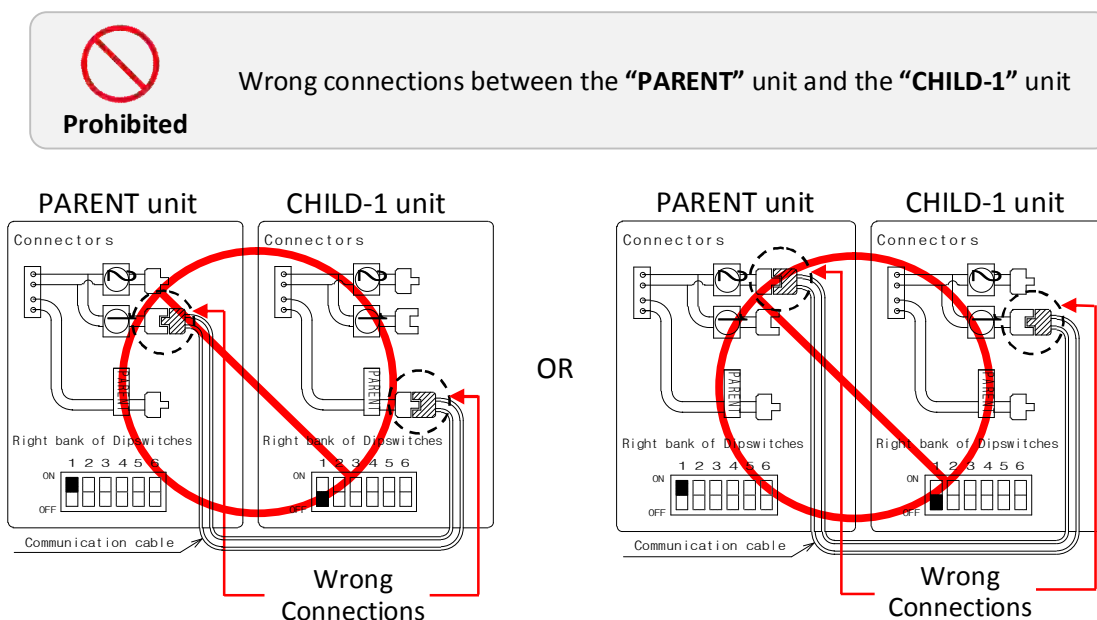

CASE 3:


- If you connect the “PARENT” connector of the “CHILD-1” unit to the “[1]” connector of the “CHILD-2” unit, the “CHILD-2” unit will operate as an individual unit, and will not be part of the Easy-Link system.

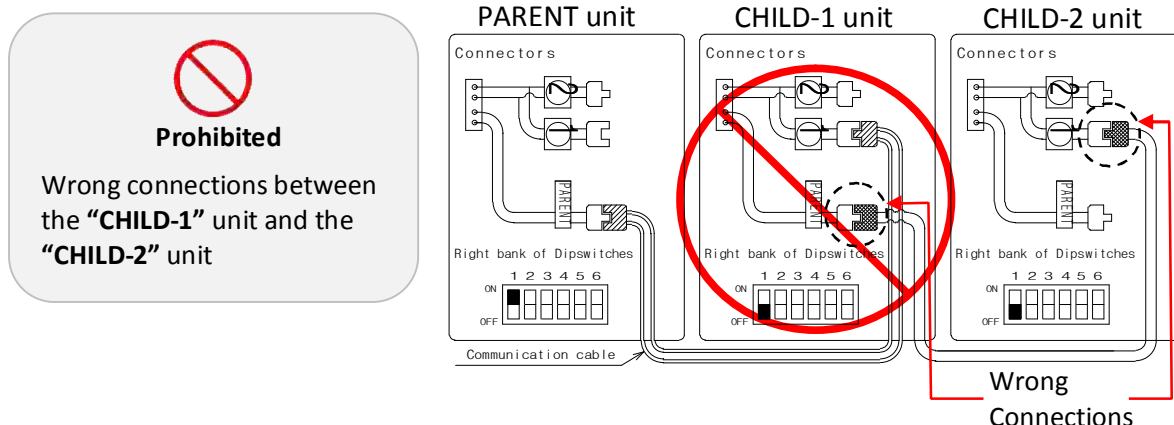

Connecting two “PARENT” connectors together from two separate units **may damage the computer board**. The communication cable has a female end and a male end so it's impossible to have a PARENT -to- PARENT connection with the communication cable. Do not splice or modify connectors.

CASE 4:

- If a remote controller (optional) is used, it has to be connected to the “PARENT” unit. If the remote controller is connected to a “CHILD” unit, it will only control that particular individual “CHILD” unit and will not control the Easy-Link system as a whole.

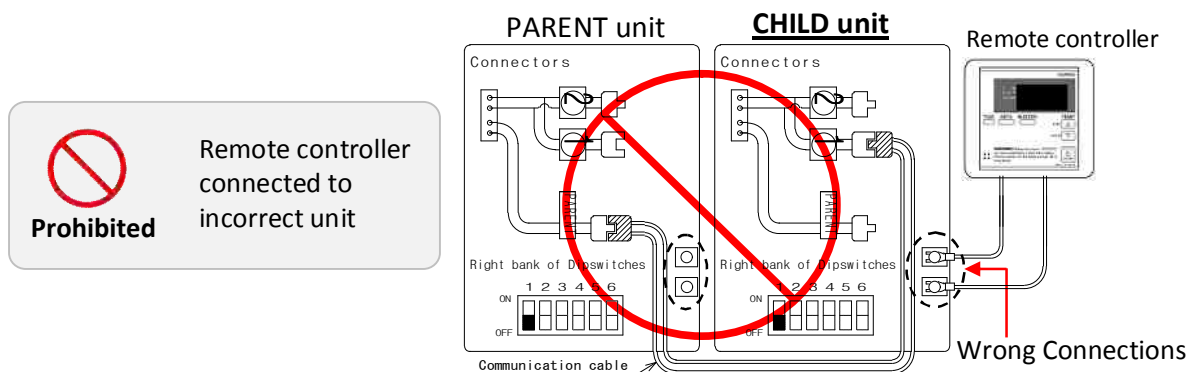

Remote controller connected to incorrect unit

APPLICATIONS

-Space-Heating Applications-



- ❑ In order to purge air in water pipes within a closed-loop system, an air vent and air separator should be installed in to the system. Required circulation flow rates are labeled next to each application diagram. These flow rate requirements must be followed.
- ❑ Toxic chemicals used in boiler treatments such as alcohol, glycerol and glycol groups must not be introduced into the system if the system incorporates an open-loop potable water system.
- ❑ The water heater can be used to supply potable water and space heating and shall not be connected to any heating system or component(s) previously used with non-potable water where any chemicals were added to the water heating appliances.
- ❑ When the system requires water for space heating at temperatures higher than required for other uses, a means such as a mixing valve shall be installed to temper the water for those other uses in order to reduce scald hazard potential.
- ❑ Water temperature over 125 °F (52°C) can cause severe burns instantly or death from scalds.
- ❑ Chemicals such as diluted Glycol can be used for radiant floor, Hydro/fan coil air or Baseboard heating only. The diluted solution of glycol must contain between 25 and 55 % of Glycol. Be aware that in closed-loop glycol systems, low pressure in the heat exchanger can cause low-temperature boiling, resulting in excessive noise and damage to the water heater. Consult with the glycol maker for specifications prior to use.

-Recirculation-

* The recirculation pump is to be controlled by:


-Dual-set aquastat (recommended w/timer)

OR

-“Pump Control Connections” 510 (T-D2) models only.


Refer to p. 23.

* The recirculation pump is to provide no less than 2 GPM and no more than 4 GPM through each activated unit in the system.

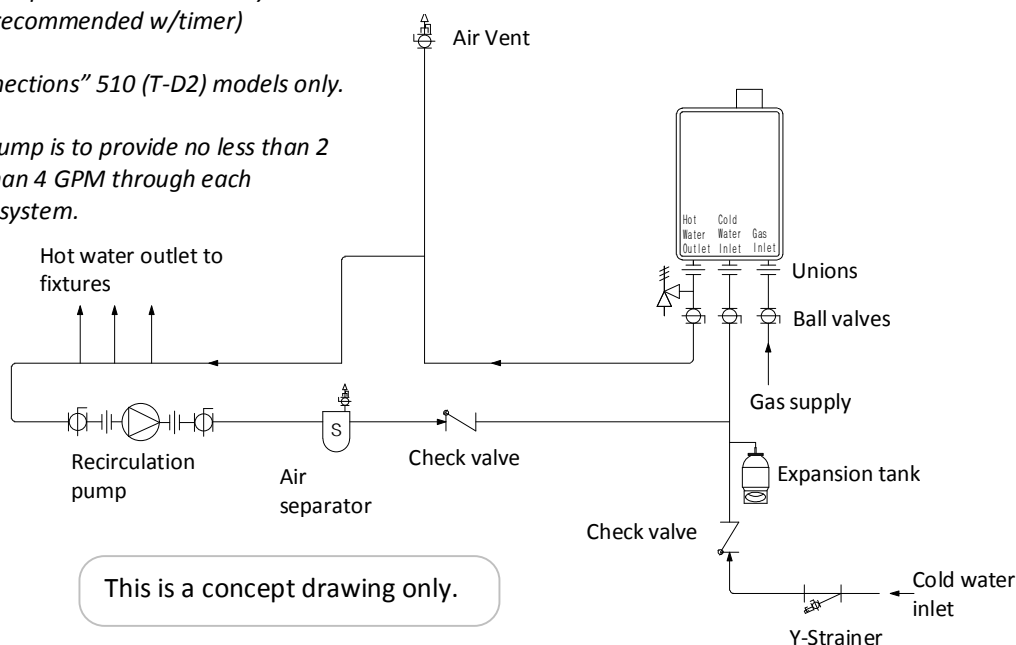

-Dual-purpose hot water heating- (Domestic and Space Heating):

Diagrammatic Layout of Radiant Heating and
Domestic Water Heater Per Mass. Code

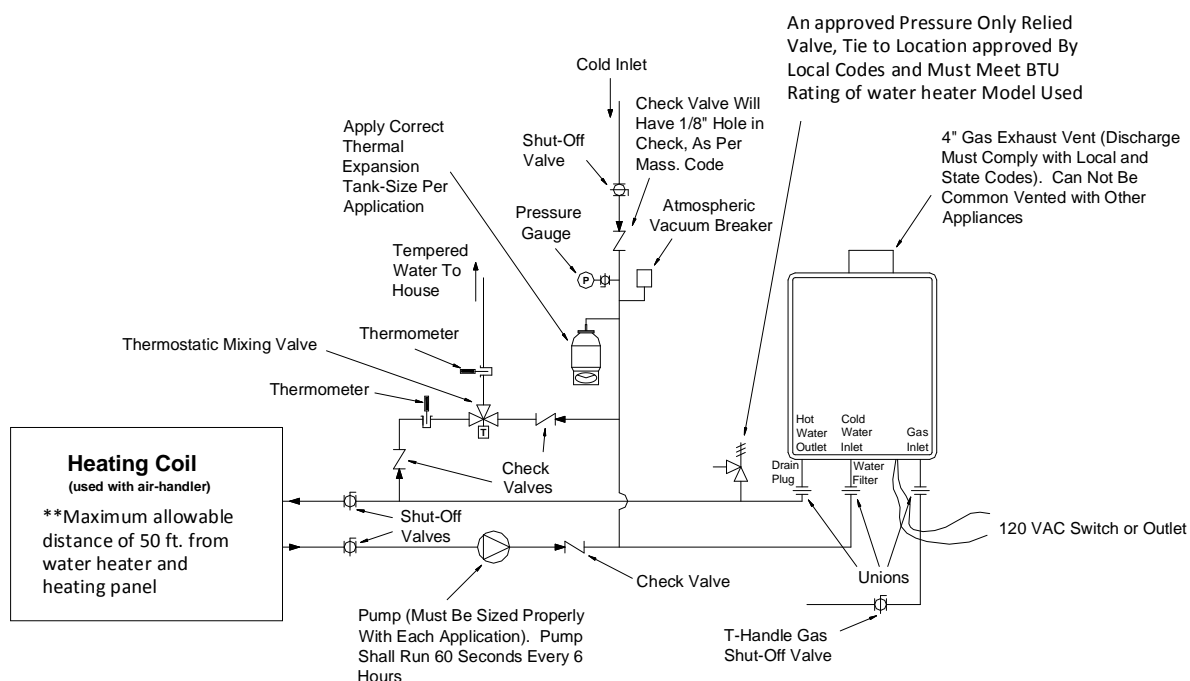

** The circulation pump is to provide no less than 2 GPM and no more than 4 GPM through each activated unit in the system.*

NOTICE

- ☐ **Priority Control Devices** such as a flow switch, an Aquastat or other electronic controller can be used to prioritize the domestic water system over the heating system.
- ☐ Follow all local codes, or in the absence of local codes, follow the most recent edition of the National Standard Code, ANSI Z21.10.3.
- ☐ This illustration is a concept design only. The reference to the 1/8th hole in check is only for the State of Massachusetts. There are a wide variety of variations to the application of controls and equipment presented. Designers must add all necessary safety and auxiliary equipment to conform to code requirements and design practice. For more details, contact the manufacturer.

INITIAL OPERATION

FOR YOUR SAFETY, READ BEFORE OPERATING

- ☐ Check the **GAS and WATER CONNECTIONS** for leaks before firing unit for the first time.
- ☐ Open the main gas supply valve to the unit using only your hand to avoid any spark. Never use tools. If the knob will not turn by hand, do not try to force it; call a qualified service technician. Forced repair may result in a fire or explosion due to gas leaks.
- ☐ Be sure to check for the presence of leaking gas toward the bottom of the unit because some gases are heavier than air and may settle towards the floor.
- ☐ Check the **GAS PRESSURE**. Refer to p. 19.
- ☐ Do not try to light the burner manually. It is equipped with an electronic ignition device which automatically lights the burner.
- ☐ Check for **PROPER VENTING and COMBUSTIBLE AIR** to the water heater.
- ☐ Purge the **GAS and WATER LINES** to remove any air pockets.
- ☐ Do not use this water heater if any part has been submersed under water. Immediately call a qualified service technician to inspect the water heater and to replace any damaged parts.



IF YOU SMELL GAS:

- ☐ Do not try to start the water heater.
- ☐ Do not touch any electric switches; do not use any phone in your building.
- ☐ Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- ☐ If you cannot reach your gas supplier, call the fire department.


1. Once the above checks have been completed, please clean filter of any debris. Refer to p. 36 for instructions.



2. Fully open the manual water control valve on the water supply line.




3. Open a hot water tap to verify that water is flowing to that tap.

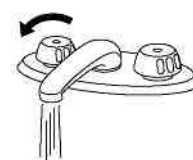


Then close the hot water tap.


4. Fully open the manual gas control valve installed.



5. Turn on the 120 volt 60 Hz power supply to the water heater.

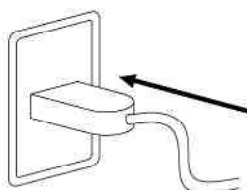

6. Now you are ready to enjoy hours of endless hot water.

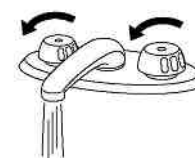

Owner's Guide

OPERATING SAFETY

FOR YOUR SAFETY READ BEFORE OPERATING



WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This water heater does not have a pilot. It is equipped with an ignition device that automatically lights the burner. Do not try to light the burner by hand.
- B. BEFORE OPERATING smell all around the water heater area for evidence of leaking gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.


WHAT TO DO IF YOU SMELL GAS.

- ☐ Do not try to light any appliance.
- ☐ Do not touch any electric switch; do not use any phone in your building.
- ☐ Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- ☐ If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to turn the gas valve knob. Never use tools. If the knob will not turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this water heater if any part has been under water. Immediately call a qualified service technician to inspect the water heater and to replace any damaged parts.

OPERATING INSTRUCTIONS

1. **STOP!** Read the safety information above or in the Owners Manual.
2. Turn off all electric power to the water heater.
3. Do not attempt to light the burner by hand.
4. Turn the manual gas valve located on the outside of the unit clockwise  to the off position.
5. Wait five (5) minutes to clear out any gas. If you then smell gas. STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to next step.
6. Turn the manual gas valve located on the outside of the unit counter clockwise  to the ON position.
7. Turn on all electrical power to the water heater.
8. If the water heater will not operate, follow the instructions "to Turn Off Gas to water heater" and Call your service technician or gas supplier.

TO TURN OFF GAS TO APPLIANCE

1. Turn off all electric power to the water heater if service is to be performed.
2. Turn the manual gas valve located on the outside of the unit clockwise  to the off position.

DANGER



Vapors from flammable liquids will explode and catch fire causing death or severe burns.

Do not use or store flammable products such as gasoline, solvents or adhesives in the same room or area near the water heater.

Keep flammable products:

1. Far away from heater
2. In approved containers
3. Tightly closed
4. Out of children's reach

Vapors:

1. Cannot be seen
2. Vapors are heavier than air
3. Go a long way on the floor
4. Can be carried from other rooms to the main burner by air currents

WARNING: Do not install water heater where flammable products will be stored.

Read and follow water heater warnings and instructions. If owner's manual is missing, contact the manufacturer.

WARNING

The outlet hot water temperature of the water heater is factory set at 122°F (50°C).

Use this heater at your own risk. The set outlet water temperature can cause severe burns instantly or death from scalds. Test the water before bathing or showering.

Do not leave children or an infirm person in the bath unsupervised.

DANGER



Hot Water temperature over 125°F (52°C) can cause severe burns instantly or death from scalding. Children, disabled and elderly are at the highest risk of being scalded. Feel water temperature before bathing or showering. Temperature limiting valves are available. Ask a professional person.

WARNING: California Proposition 65 lists chemical substances known to the state to cause cancer, birth defects, death, serious illness or other reproductive harm. This product may contain such substances, be their origin from fuel combustion (gas, oil) or components of the product itself.


NORMAL OPERATION

GENERAL



WARNING


- ❑ Hot Water temperatures over 125°F (52°C) can cause severe burns instantly or death from scalding.
- ❑ The outlet hot water temperature of the water heater is factory set at 122°F (50°C).
- ❑ Feel the water temperature before bathing or showering.

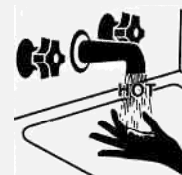


NOTICE

- ❑ Flow rate to activate the water heater : 0.5 gallons per minute at the default set temperature
- ❑ Flow rate to keep the water heater running : 0.4 gallon per minute

1. Open a hot water tap.*

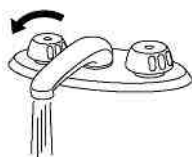

2. Mix cold water with the hot to get the correct temperature water.

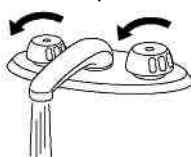

3. Close the hot water tap.



*If a remote controller installed, turn the remote controller ON by pressing the power ON/OFF button on the remote controller and then set the temperature by pressing the HOT/COLD buttons before opening a hot water tap. The temperature is displayed when the remote controller is turned ON.

TEMPERATURE SETTINGS

-Without remote controller-

Depending on the model, there are 4 or 8 temperatures that you can select from by changing the dipswitch settings on the computer board without the remote controller. See the table below.

Model	Temperatures available							
110 (T-KJr2) 310 (T-K4)	113°F	122°F	131°F	140°F				
510 (T-D2)	104°F	113°F	122°F	131°F	140°F	158°F	176°F	185°F

For detailed dipswitch settings for each temperature, refer to the next page.

- ❑ The temperature has been preset at the factory to 122°F (50°C).
- ❑ If temperatures other than the ones listed above are required, the remote controller can provide several more temperature options. Refer to p. 9 for a list of available temperatures on the remote controller.
- ❑ This water heater is an on-demand, tankless water heater designed to efficiently supply endless hot water without reference to temperature settings.

-Dipswitch settings for each temperature on the computer board-


110 (T-KJr2) and 310 (T-K4) models

Temperature Settings			
113°F (45°C)	ON OFF	122°F (50°C) DEFAULT	ON OFF
131°F (55°C)	ON OFF	140°F (60°C)	ON OFF


510 (T-D2) models

Temperature Settings <Right bank of dipswitches>			
104°F (40°C)	ON OFF	113°F (45°C)	ON OFF
122°F (50°C) DEFAULT	ON OFF	131°F (55°C)	ON OFF
140°F (60°C)	ON OFF	158°F (70°C)	ON OFF
176°F (80°C)	ON OFF	185°F (85°C)	ON OFF

110 (T-KJr2) and 310 (T-K4) models

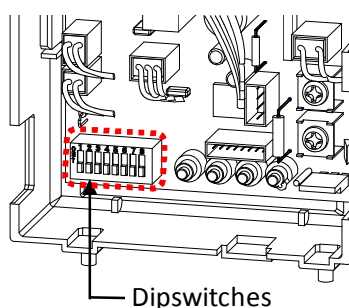

510 (T-D2) models

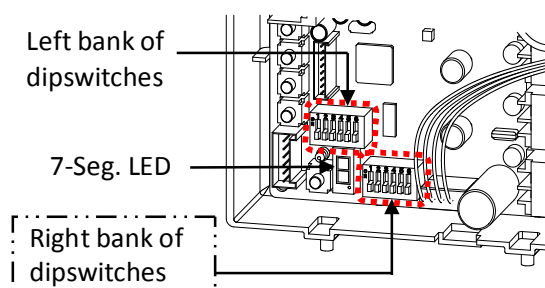

Location of the bank of dipswitches on the computer board



WARNING

- ❑ **DO NOT set to 185 °F if you use your water heater in a recirculation system. This will cause damage to the heater and void the warranty. (This temperature setting is only available on the 510 (T-D2) models.)**
- ❑ **DO NOT adjust the left bank of dipswitches. For the 510 (T-D2) models.**
- ❑ **Turn off the power supply to the water heater before changing the dipswitch settings.**
- ❑ **Only change the switches with the dark squares. The dark squares indicate which direction the dipswitch should be set to.**

FLOW

- ❑ The flow rate through the water heater is limited to a maximum of 6.6 GPM for the 110 (T-KJr2) models, 8.0 GPM for the 310 (T-K4) models, and 10.0 GPM for the 510 (T-D2) models.
- ❑ The temperature setting, along with the supply temperature of the water will determine the flow rate output of the unit.
- ❑ Please refer to the temperature vs. gallons per minute chart on p. 48-49 to determine the likely flow rates based on your local ground water temperature and your desired outlet water temperature.
- ❑ Based on the United States Department of Energy method of testing water heater output, the water heater is rated for gallons per hour (GPH) or gallons per minute (GPM) for Natural Gas and Propane, when raising the water temperature by 77°F (from 58°F to 135°F). See the diagram below.

Household Flow Rates

Appliance / Use	Flow Rate (GPM)
Lavatory Faucet	1.0
Bath Tub	4.0 – 10.0
Shower	2.0
Kitchen Sink	1.5
Dishwasher	1.5
Washing machine	4.0

Taken from UPC 2006

Model	110 Indoor (T-KJr2-IN)		110 Outdoor (T-KJr2-OS)		310 Indoor (T-K4-IN)		310 Outdoor (T-K4-OS)		510 Indoor (T-D2-IN)		510 Outdoor (T-D2-OS)	
	GPH	GPM	GPH	GPM	GPH	GPM	GPH	GPM	GPH	GPM	GPH	GPM
Natural Gas	172	2.9	180	3.0	244	4.1	242	4.0	254	4.2	255	4.3
Propane	184	3.1	179	3.0	250	4.2	249	4.2	256	4.3	255	4.3

- ❑ Refer to the table to the top right for typical household plumbing fixture flow rates to determine what the water heater can do in a household application.

FREEZE PROTECTION SYSTEM

- ❑ This unit comes equipped with heating blocks to protect it against damages associated with freezing.
- ❑ For this freeze protection system to operate there has to be electrical power to the unit. Damage to the heat exchanger caused by freezing temperatures due to power loss is not covered under the warranty. In cases where power losses can occur, consider the use of a backup power supply.
- ❑ The freeze protection system will activate when the surrounding and/or outside temperatures drop below 36.5°F (2.5°C).
- ❑ For the 110 Indoor (T-KJr2-IN), 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN) models:
 - ❑ In any areas subject to freezing temperatures, the manufacturer highly recommends an indoor installation with an indoor model. In such an installation, freezing issues can only occur if cold air enters through the venting into the heat exchanger, whether by negative pressures within the installation location or by strong outside winds.
 - ❑ The manufacturer also highly recommends the use of a back flow vent damper to minimize the amount of cold air entering through the exhaust venting when the water heater is off.
- ❑ It is the installer's responsibility to be aware of freezing issues and take all preventative measures. The manufacturer will not be responsible for any damage to the heat exchanger as a result of freezing.
- ❑ If you will not be using your heater for a long period of time:
 1. Completely drain the unit of water. Refer to p. 36.
 2. Disconnect power to your heater.

This will keep your unit from freezing and being damaged.



CAUTION


Only pipes within the water heater are protected by the freeze protection system. Any water pipes (hot or cold) located outside the unit will not be protected. Properly protect and insulate these pipes from freezing.

MAINTENANCE AND SERVICE



Turn off the electrical power supply and close the manual gas shutoff valve and the manual water control valve before servicing.


- ❑ Clean the cold-water inlet filter. (Refer to diagram below)
- ❑ Be sure that all openings for combustion and ventilation air are not blocked.
- ❑ The venting system should be checked annually for any leaks, corrosion, blockages or damage.
- ❑ The burner should be checked annually for dust, lint, grease or dirt.
- ❑ Keep the area around the water heater clear. Remove any combustible materials, gasoline or any flammable vapors and liquids.
- ❑ In accordance with all local codes and common safety practices, Water discharged from the pressure relief vane can cause severe burns instantly from scalding. DO NOT touch the pressure relief valve.
- ❑ If the relief valve discharges periodically, it may be due to thermal expansion in a closed water supply system. Contact the water supplier or local plumbing inspector on how to correct this situation.
- ❑ Visual check of burner flames (see below) through the burner window in the burner assembly located at the middle of the water heater.

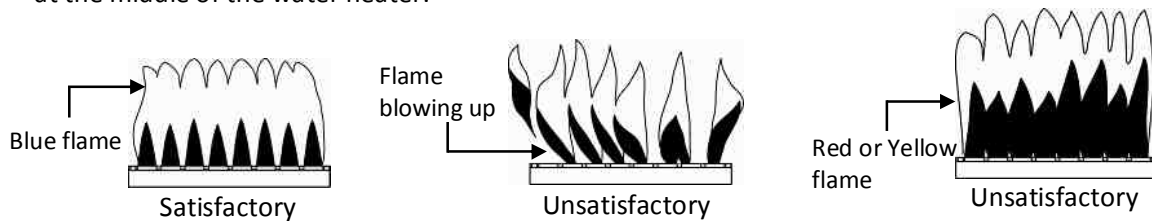

The manufacturer recommends having the unit checked once a year or as necessary by a licensed technician. If repairs are needed, any repairs should be done by a licensed technician.

UNIT DRAINING and FILTER CLEANING



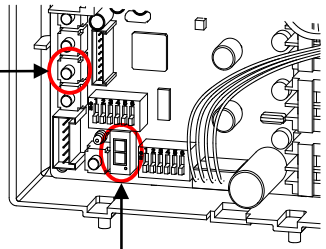
1. Close the manual gas shut off valve.
2. Turn off power to the unit and wait a couple of seconds. Turn on again.
3. Wait 30 seconds, and then turn off power to the unit, yet again.
4. Close the water shut off valve.
5. Open all hot water taps in the house. When the residual water flow has ceased, close all hot water taps.
6. Have a bucket or pan to catch the water from the unit's drain plugs. **Unscrew** the two drain plugs (Large and small) to drain all the water out of the unit.
7. Wait a few minutes to ensure all water has completely drained from unit.
8. **Clean the filter:** Check the water filter located within the cold inlet. With a tiny brush, clean the water filter of any debris which may have accumulated and reinsert the filter back into the cold water inlet.
9. Securely screw the drain plugs back into place. **Hand-tighten only.**

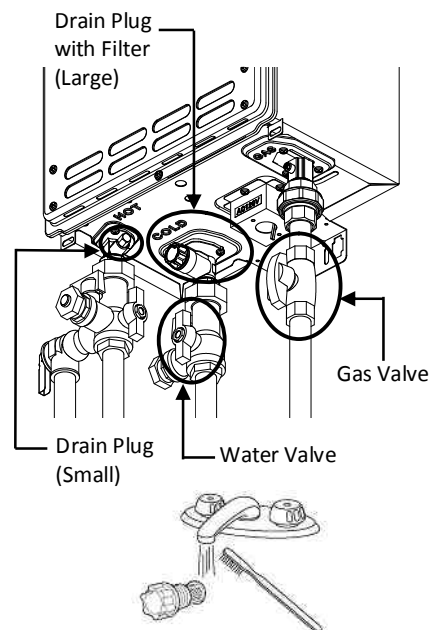

TROUBLESHOOTING

GENERAL


-TEMPERATURE and AMOUNT OF HOT WATER-	PROBLEM	SOLUTIONS
	It takes long time to get hot water at the fixtures.	<input type="checkbox"/> The time it takes to deliver hot water from the water heater to your fixtures depends on the length of piping between the two. The longer the distance or the bigger the pipes, the longer it will take to get hot water. <input type="checkbox"/> If you would like to receive hot water to your fixtures quicker, you may want to consider a hot water recirculation system. (p. 28)
	The water is not hot enough.	<input type="checkbox"/> Compare the flow and temperature. See the charts on p. 48-49. <input type="checkbox"/> Check cross plumbing between cold water lines and hot water lines. <input type="checkbox"/> Is the gas supply valve fully open? (p. 30) <input type="checkbox"/> Is the gas line sized properly? (p. 18) <input type="checkbox"/> Is the gas supply pressure enough? (p. 19) <input type="checkbox"/> Is the set temperature set too low? (p. 33-34)
	The water is too hot.	<input type="checkbox"/> Is the set temperature set too high? (p. 33-34)
	The hot water is not available when a fixture is opened.	<input type="checkbox"/> Make sure the unit has 120 VAC / 60 Hz power supply. <input type="checkbox"/> If you are using the remote controller, is the power button turned on? <input type="checkbox"/> Is the gas supply valve fully open? (p. 30) <input type="checkbox"/> Is the water supply valve fully open? (p. 30) <input type="checkbox"/> Is the filter on cold water inlet clean? (p. 36) <input type="checkbox"/> Is the hot water fixture sufficiently open to draw at least 0.5 GPM through the water heater? (p. 33) <input type="checkbox"/> Is the unit frozen? (p. 35) <input type="checkbox"/> Is there enough gas in the tank / cylinder? (For Propane models)
	The hot water turns cold and stays cold.	<input type="checkbox"/> Is the flow rate enough to keep the water heater running? (p. 33) <input type="checkbox"/> If there is a recirculation system installed, does the recirculation line have enough check valves? (p. 28) <input type="checkbox"/> Is the gas supply valve fully open? (p. 30) <input type="checkbox"/> Is the filter on cold water inlet clean? (p. 36) <input type="checkbox"/> Are the fixtures clean of debris and obstructions? <input type="checkbox"/> Check if the flow rate is too low. (p. 33-34)
	Fluctuation in hot water temperature.	<input type="checkbox"/> Is the filter on cold water inlet clean? (p. 36) <input type="checkbox"/> Is the gas line sized properly? (p. 18) <input type="checkbox"/> Is the supply gas pressure sufficient? (p. 19) <input type="checkbox"/> Check for cross connection between cold water lines and hot water lines.

	PROBLEM	SOLUTIONS
- WATER HEATER -	Unit does not ignite when water goes through the unit.	<ul style="list-style-type: none"> <input type="checkbox"/> Is the flow rate over 0.5 GPM? (p. 33) <input type="checkbox"/> Check for the filter on cold water inlet. (p. 36) <input type="checkbox"/> Check for reverse connection and cross connection. <input type="checkbox"/> If you use the remote controller, is the power button turned on? <input type="checkbox"/> Check if the inlet temperature is too high.
	The fan motor is still spinning after operation has stopped.	<ul style="list-style-type: none"> <input type="checkbox"/> This is normal. After operation has stopped, the fan motor keeps running from 15 to 70 seconds in order to re-ignite quickly, as well as purge all the exhaust gas out of the flue.
	Unit sounds abnormal while in operation	<ul style="list-style-type: none"> <input type="checkbox"/> Contact the manufacturer at 1-877-737-2840.
-Remote controller- (OPTIONAL)-	Remote controller does not display anything when the power button is turned on.	<ul style="list-style-type: none"> <input type="checkbox"/> Make sure the unit is supplied with power. <input type="checkbox"/> Make sure the connection to the unit is correct. (p. 22) <p>-9007603005 (TM-RE30) only-</p> <p>If the green LED lights up, the remote controller has been turned ON. When the unit has not operated for five minutes or more, the display turns off to conserve energy.</p> <div style="display: flex; align-items: center; justify-content: center;">  <div style="margin-left: 10px;"> <p>When ON, green LED is lit.</p>  </div> </div>
	An ERROR code is displayed.	<ul style="list-style-type: none"> <input type="checkbox"/> Please see p. 39-41.
-EASY-LINK SYSTEM- 510 (T-D2) models only	How are the unit numbers assigned?	<ul style="list-style-type: none"> <input type="checkbox"/> For an Easy-Link system, the Parent unit is always labeled #1 and all other subsequent Child units are numbered randomly. <input type="checkbox"/> To check which numbers are assigned to which Child units, push the button on the computer board of any Child unit as shown below. The unit number will be displayed on the 7-Seg LED. (Refer to p.24 to 27) <div style="text-align: center;">  <p>Button to check unit numbers</p> <p>7-Seg LED</p> </div>


ERROR CODES

- The units are self diagnostic for safety and convenience when trouble shooting.
- If there is a problem with the installation or the unit, depending on the model or if there is a remote controller installed, it will either display a numerical error code on the 7-Seg LED on the computer board (for the 510 (T-D2) models only), display a blinking red LED (for the 110 (T-KJr2) and 310 (T-K4) models), or the error code will display on the remote controller if it is installed.
- Consult with the table on the following page for the cause of each error code.

110 (T-KJr2) and 310 (T-K4) models

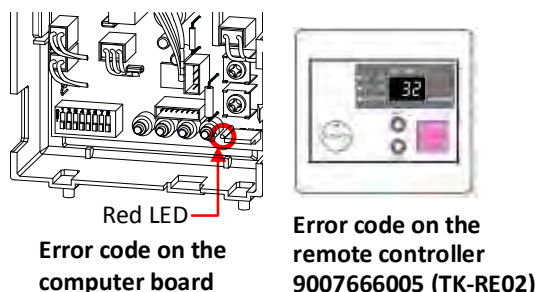

510 (T-D2) models

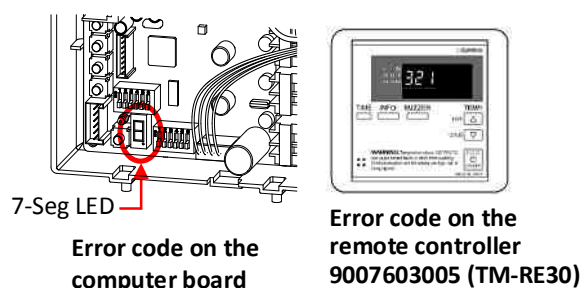

-Single unit installations-

Example: If your unit displays the “321” error code (which signifies an inlet thermistor failure)


- **110 (T-KJr2) and 310 (T-K4) models:** The red LED on the computer board will be blinking two times.
- **If the remote controller 9007666005 (TK-RE02) is installed:** “32” will display on the screen in its entirety.
- **510 (T-D2) models:** The 7-seg. LED on the computer board will display “3”...”2”...”1” in that order one digit at a time and continually repeat.
- **If the remote controller 9007603005 (TM-RE30) is installed:** “321” will display on the screen in its entirety.

-Easy-Link system for the 510 (T-D2) models only-

Error codes will display differently with units installed within an Easy-Link System, not only to show what the error code is, but to also indicate which unit within the system has the error code. Below is a sample of how the same error code is displayed in an Easy-Link System.

Example: If Unit #2 has the “321” error code (inlet thermistor failure)

- **Parent unit:** It will display “3”...”2”...”1”...”0”...”2” one digit at a time on the 7-Seg LED. The first 3 numbers indicate the error code. The last two numbers indicate that Unit #2 has the error code.
- **Unit #2:** It will display “3”...”2”...”1” on the 7-Seg LED, just like in the Single Unit example.
- **Unit #3 and #4:** These units will not display anything, as the error code does not pertain to them.
- **Remote controller 9007603005 (TM-RE30):** It will display “232” on its screen. The first “2” indicates that Unit #2 has the error. The “32” indicates the first two digits of the “321” error code.

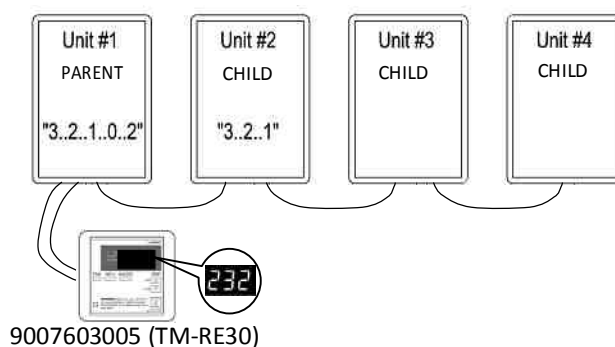

-FAULT ANALYSIS OF ERROR CODES-

If the error code displayed on the computer board of the Water heater or remote controller, please check the following. After checking, **Consult with the manufacturer.**


110 (T-KJr2) and 310 (T-K4)		510 (T-D2)	Malfunction description	Diagnosis
Red LED	Remote	Remote		
One Time	03	031	Incorrect dipswitch setting	<input type="checkbox"/> Check the dipswitch settings on the PCB. (Part #701)
Five Times	10	101	Warning for the "991" error code	<input type="checkbox"/> Check the gas type of the water heater. <input type="checkbox"/> Check if there is any blockage in the intake air and/or exhaust. <input type="checkbox"/> If the water heater is installed as a direct-vent system, check whether there is enough distance between the intake air terminal and the exhaust terminal. <input type="checkbox"/> Check the altitude/elevation of area of where the water heater installed. <input type="checkbox"/> Check if there is grease and/or dirt in the burner (Part #101) and the fan motor (Part #103), especially if the water heater has been installed in a contaminated area.
Three Times	11	111	Ignition failure	<input type="checkbox"/> Check if the Hi-limit switch (Part #412) is properly functioning. <input type="checkbox"/> Check for connection/breakage of wires (Part #413, 708, 709, 710, 712), burn marks on the computer board (Part #701), and/or soot on the flame rod (Part #108). <input type="checkbox"/> Check if there is a buzzing spark ignition sound coming from the burner (Part #101) when water heater prepares for combustion. <input type="checkbox"/> Listen for the double "clunk" sound coming from gas valve assembly (Part #102) when water heater goes into combustion. <input type="checkbox"/> Check if there is leaking from heat exchanger. (Part #401)
Three Times	12	121	Loss of flame	<input type="checkbox"/> Check if the Hi-limit switch (Part #412) is properly functioning. <input type="checkbox"/> Check for connection/breakage of wires (Part #413, 708, 709, 710, 712), burn marks on the computer board (Part #701), and/or soot on the flame rod (Part #108). <input type="checkbox"/> Check if there is leaking from heat exchanger. (Part #401)
Two Times	31	311	Output thermistor failure	<input type="checkbox"/> Check for connection/breakage of wires and/or debris on thermistor. (Part #407, 408, 411, 716)
	32	321	Inlet thermistor failure	
N/A	N/A	331	Mixing thermistor failure	
Two Times	39	391	Air-fuel Ratio Rod failure	<input type="checkbox"/> Check for connection/breakage of wires (Part #709) and/or soot on the AFR rod. (Part #108)

110 (T-KJr2) and 310 (T-K4)		510 (T-D2)	Malfunction description	Diagnosis
Red LED	Remote	Remote		
N/A	N/A	441	Flow Sensor Failure (Easy-Link System only)	<input type="checkbox"/> Check for connection/breakage of wires and/or debris on the flow sensor impeller. (Part #402, 717)
Six Times	51	510	Abnormal Gas Solenoid Valve	<input type="checkbox"/> Check for connection/breakage of wires (Part #708) and/or burn marks on the computer board (Part #701).
Six Times	55	N/A	Abnormal Main Gas Valve	<input type="checkbox"/> Check for connection/breakage of wires (Part #708) and/or burn marks on the computer board (Part #701).
Four Times	61	611	Fan Motor Fault	<input type="checkbox"/> Check for connection/breakage of wires, dust buildup in the fan motor (Part #103) and/or burn marks on the computer board (Part #701). <input type="checkbox"/> Check for frozen/corrosion of connectors (Part #103).
N/A	N/A	651	Flow adjustment Valve Fault (Easy-Link System only)	<input type="checkbox"/> Inspect the flow adjustment valve (Part #402), for connection/breakage of wires (Part #718), locked motor drive due to scale buildup, and/or water leakage.
One Time	70	701	Computer board Fault	<input type="checkbox"/> Check for connection/breakage of wires (Part #714) and/or burn marks on the computer board (Part #701). <input type="checkbox"/> Check the power supply of the water heater.
Six Times	72	721	False Flame Detection	<input type="checkbox"/> For indoor models, check if condensate drain is installed on the vent collar of the water heater. <input type="checkbox"/> Check if there is leaking from heat exchanger (Part #401).
N/A	74	741	Miscommunication between Water heater and remote controller	<input type="checkbox"/> Check the model type of the remote controller. <input type="checkbox"/> Inspect the connections between the water heater and remote controller. <input type="checkbox"/> Check the power supply of the water heater.
N/A	N/A	761	Miscommunication in Easy-Link system	<input type="checkbox"/> Check if the connections between the parent unit and the child units are correct. Refer to p.24 to 27.
Five Times	99	991	Imperfect combustion	<input type="checkbox"/> Check the gas type of the water heater. <input type="checkbox"/> Inspect the environment around the water heater. Determine how long the unit has been installed. <input type="checkbox"/> Check the altitude/elevation of the area of where the water heater installed. <input type="checkbox"/> Check if there is any blockage in the intake air and/or exhaust. <input type="checkbox"/> If the water heater is installed as a direct-vent system, check whether there is enough distance between the intake air terminal and the exhaust terminal. <input type="checkbox"/> Check if there is grease and/or dirt in the burner (Part # 101) and the fan motor (Part # 104), especially if the water heater has been installed in a contaminated area.


COMPONENTS DIAGRAM

Case assembly


110 Indoor (T-KJr2-IN)

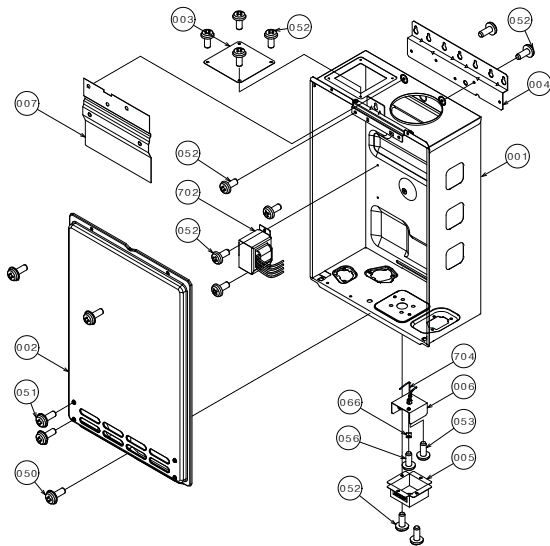


110 Outdoor (T-KJr2-OS)

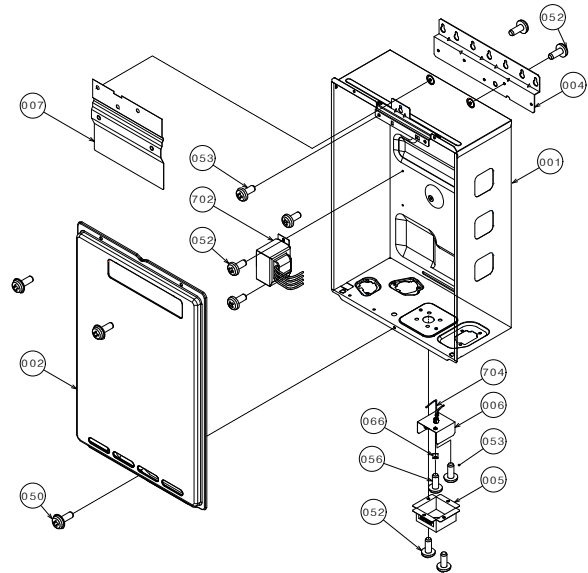


310 and 510 Indoor (T-K4-IN and T-D2-IN)

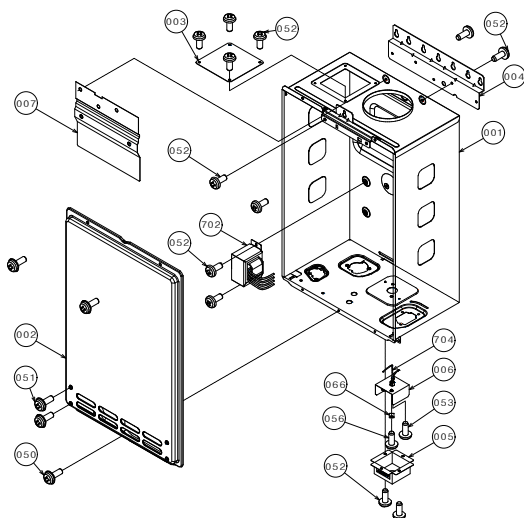


310 and 510 Outdoor (T-K4-OS and T-D2-OS)

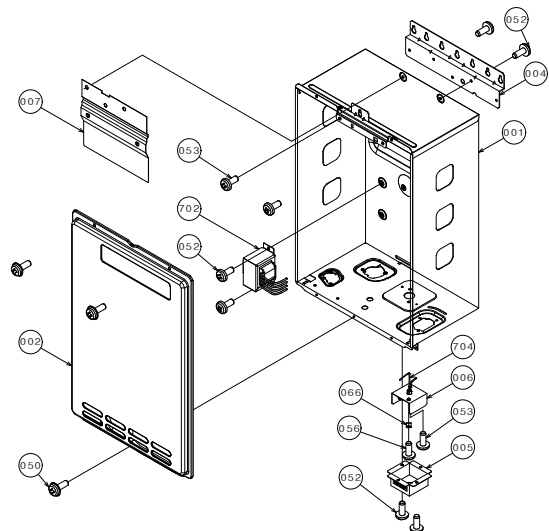

110 (T-KJr2) models

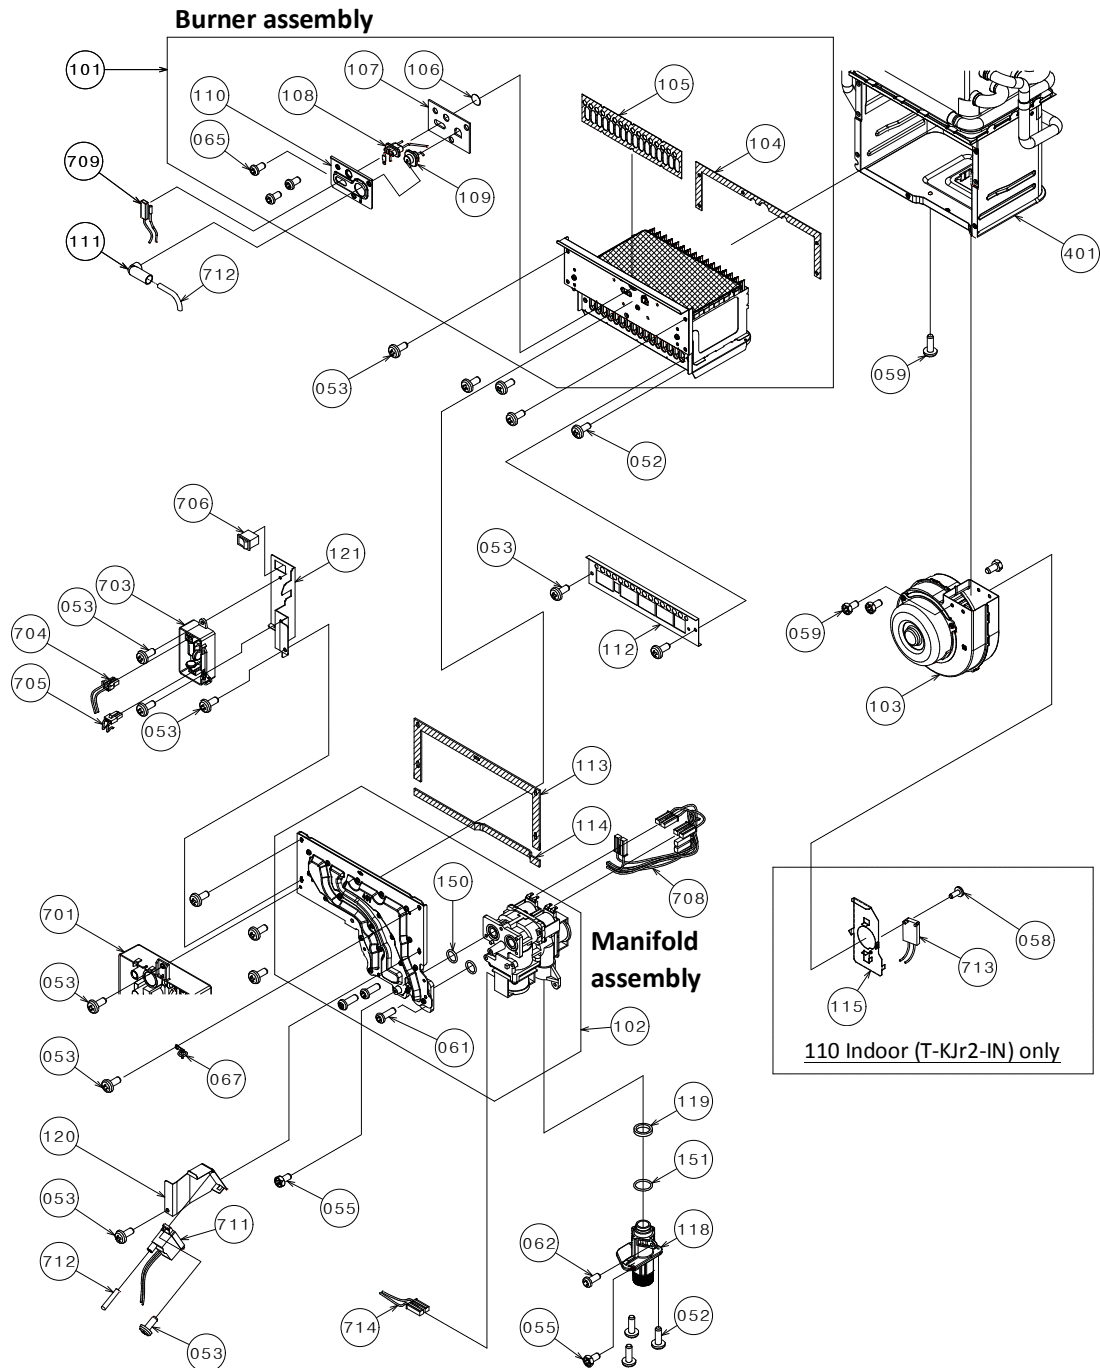


310 (T-K4) models and 510 (T-D2) models

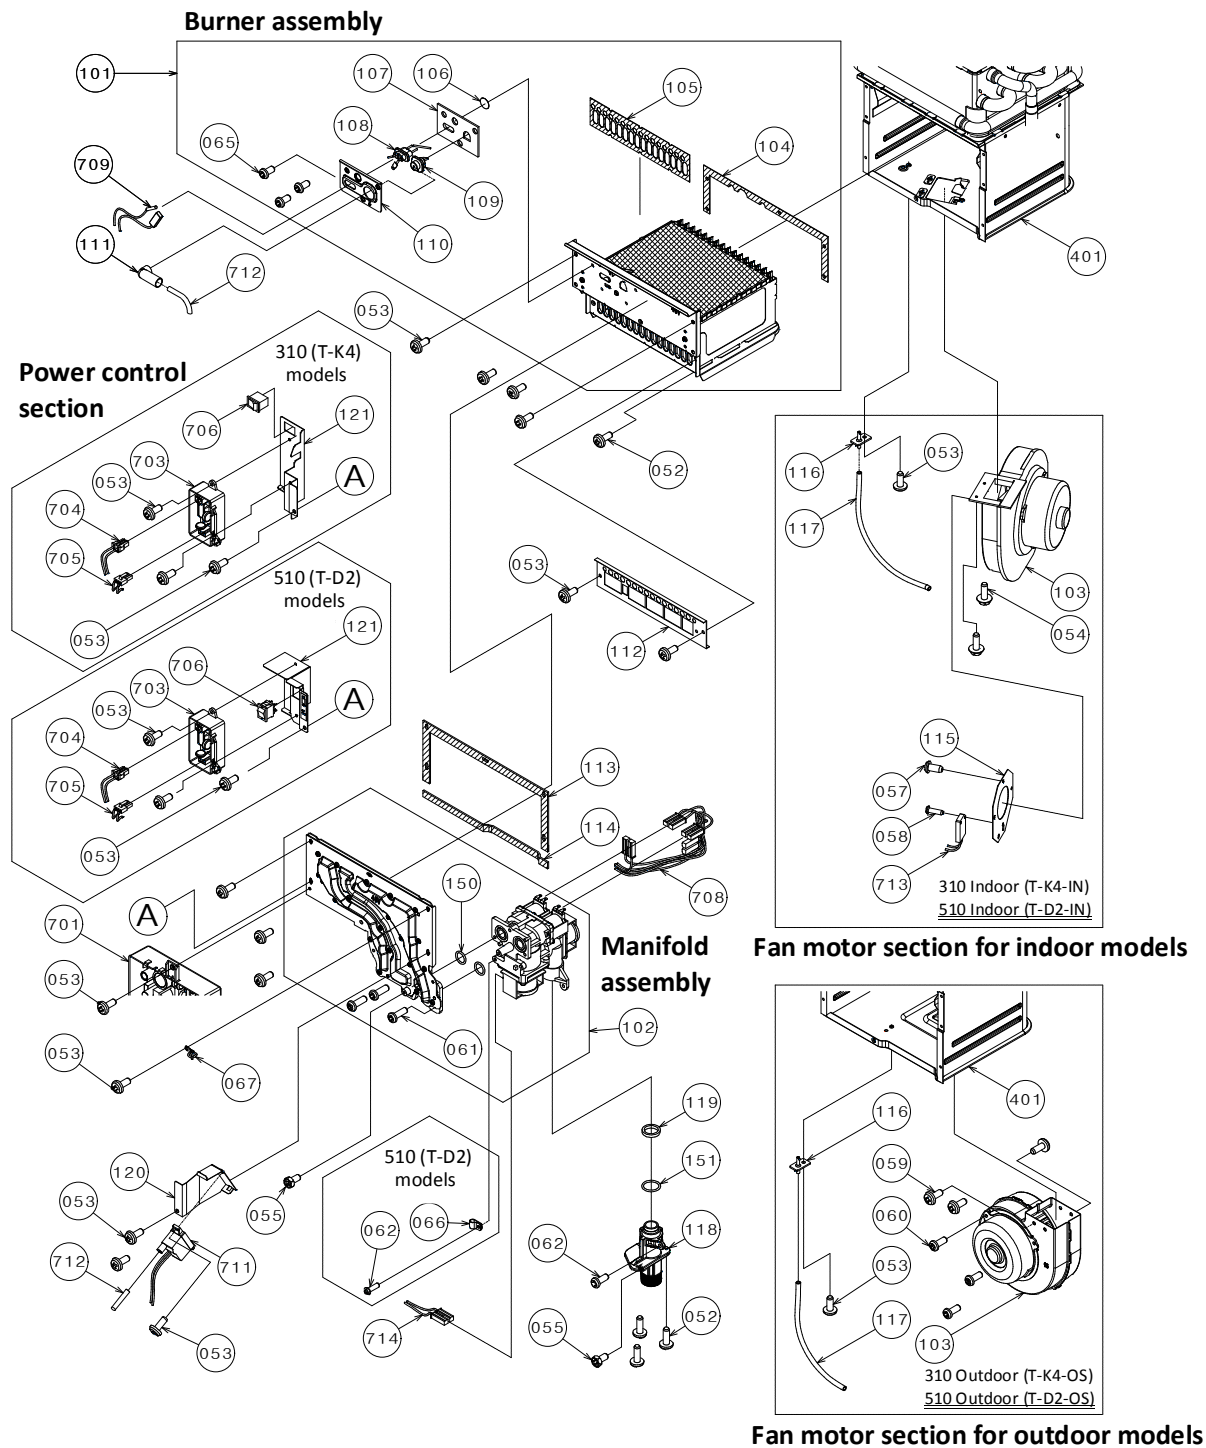


Computer
board
Assembly

**110 (T-KJr2) and
310 (T-K4) models**

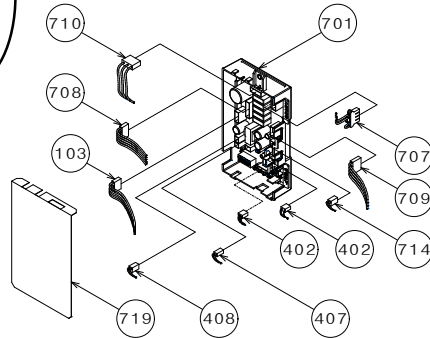


510 (T-D2) models

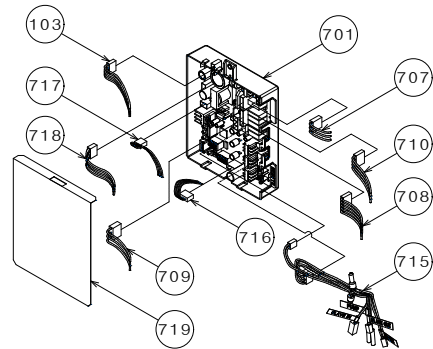


Water way assembly



110 (T-KJr2) models

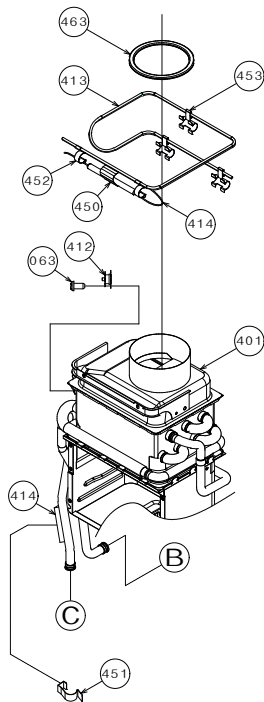


310 (T-K4) models

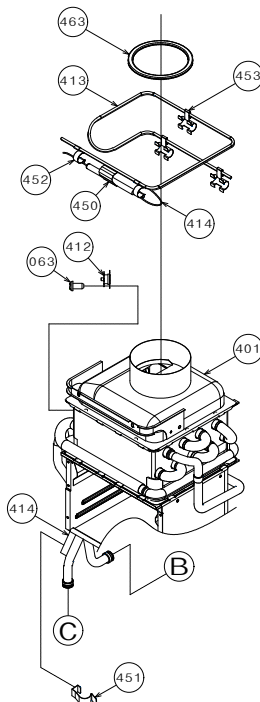


510 (T-D2) models

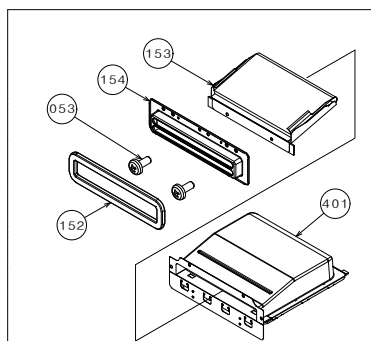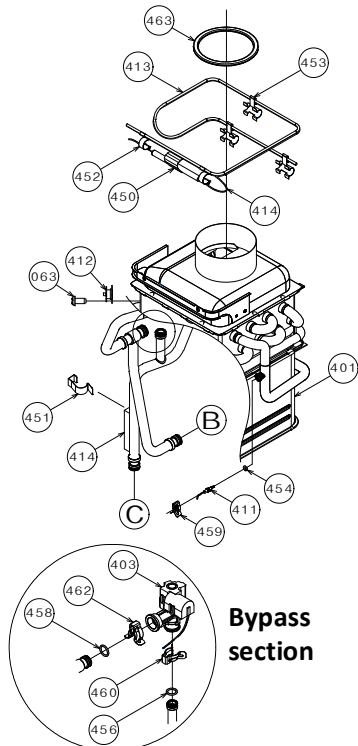

Exhaust section (outdoor model)

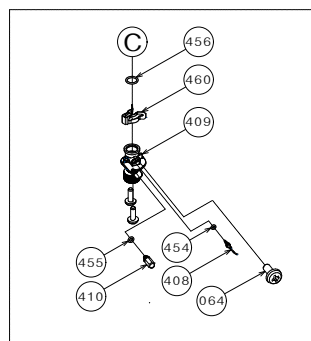

Water outlet section

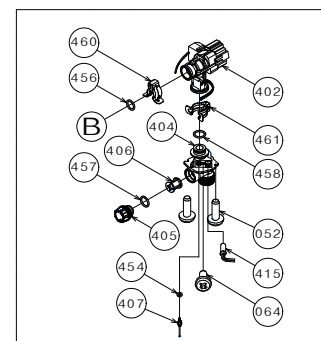

Water inlet section

PARTS LIST

Item#	Description	Part#	
		110, 310, 510 models	T-KJr2, T-K4, T-D2 models
001	Case assembly for 110 Indoor (T-KJr2-IN) for 110 Outdoor (T-KJr2-OS) for 310 and 510 Indoor (T-K4-IN and T-D2-IN) for 310 and 510 Outdoor (T-K4-OS and T-D2-OS)	319143-159 319143-172 319143-151 319143-211	EK415 EK432 EK402 EKK41
002	Front cover for 110 Indoor (T-KJr2-IN) for 110 Outdoor (T-KJr2-OS) for 310 Indoor (T-K4-IN) for 310 Outdoor (T-K4-OS) for 510 Indoor (T-D2-IN) for 510 Outdoor (T-D2-OS)	319143-163 319143-173 319143-152 319143-371 319143-174 319143-175	EK419 EK433 EK403 EK409 EK434 EK435
003 004	Air blockage plate for 110 Indoor (T-KJr2-IN), 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN) Bracket	319143-150 319143-184	EK401 EKJ09
005	Junction box	319143-014	EKJ64
006	Junction box inner plate	319143-128	EKJ66
007	Back guard panel for 110 (T-KJr2) models Back guard panel for 310 (T-K4) and 510 (T-D2) models	319143-338 319143-221	EX00M EKK5H
050	Screw M4×12 (W/Washer)	319143-025	EW000
051	Screw M4×10 (W/Washer)	319143-325	EW001
052	Screw M4×10 (Coated)	319143-026	EW002
053	Screw M4×10	319143-060	EW003
054	Hex head screw M4×12 (W/Washer)	319143-326	EW004
055	Hex head screw M4×8	319143-063	EW005
056	Screw M4×10	319143-372	EX014
057	Screw M3×6 SUS3	319143-330	EW00B
058	Screw M3×10	319143-327	EW008
059	Pan screw M4×12 (W/Washer)	319143-061	EW00H
060	Pan screw M4×10 FEZN	319143-332	EW024
061	Tap tight screw M4×12 FEZN	319143-201	EKK31
062	Pan screw M4×10	319143-062	EW006
063	Screw M3×6	319143-087	EW00A
064	Screw M4×6	319143-328	EW009
065	Pan screw M4×8	319143-059	EW00D
066	Nylon clamp	319143-143	EC00X
067	Wire clamp 60	319143-048	EM167
101	Burner assembly for 110 (T-KJr2) models Burner assembly for 310 (T-K4) and 510 (T-D2) models	319143-161 319143-030	EK417 EKH5W
102	Manifold with gas valve assembly LP for 110 (T-KJr2) models Manifold with gas valve assembly LP for 310 (T-K4) and 510 (T-D2) models Manifold with gas valve assembly NA for 110 (T-KJr2) models Manifold with gas valve assembly NA for 310 (T-K4) and 510 (T-D2) models	319143-169 319143-046 319143-165 319143-368	EK429 EKH6T EK421 EKK5K
103	Fan motor for 110 (T-KJr2) models Fan motor for 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN) Fan motor for 310 Outdoor (T-K4-OS) and 510 Outdoor (T-D2-OS)	319143-347 319143-043 319143-217	EX02E EKK25 EKK54

Output Temperature Chart

Item#	Description	Part#	
		110, 310, 510 models	T-KJr2, T-K4, T-D2 models
104	Burner holder gasket for 110 (T-KJr2) models Burner holder gasket for 310 (T-K4) and 510 (T-D2) models	319143-341 319143-032	EX00V EKK0G
105	Burner gasket	319143-031	EKK2X
106	Burner window	319143-033	EKK2V
107	Rod holder gasket	319143-034	EKK2W
108	Flame rod for 110 (T-KJr2) models Flame rod for 310 (T-K4) and 510 (T-D2) models	319143-339 319143-035	EX00R EKK0E
109	Igniter rod for 110 (T-KJr2) models Igniter rod for 310 (T-K4) and 510 (T-D2) models	319143-373 319143-037	EX00S EKK0F
110	Rod holder for 110 (T-KJr2) models	319143-340	EX00U
111	Rod holder for 310 (T-K4) and 510 (T-D2) models Rod cap	319143-036 319143-038	EKK32 EKN61
112	Burner damper for 110 (T-KJr2) models Burner damper for 310 (T-K4) and 510 (T-D2) models	319143-170 319143-156	EK430 EK412
113	Manifold gasket A	319143-044	EKK2Y
114	Manifold gasket B	319143-045	EKK2K
115	Fan damper for 110 Indoor (T-KJr2-IN) Fan damper for 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN)	319143-160 319143-367	EK416 TU001
116	Pressure port for 310 (T-K4) and 510 (T-D2) models	319143-042	EKK2D
117	Combustion chamber tube for 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN) Combustion chamber tube for 310 Outdoor (T-K4-OS) and 510 Outdoor (T-D2-OS)	319143-041 319143-344	EKK2N EX019
118	Gas inlet	319143-050	EKK1E
119	Gas inlet ring	319143-049	EKK2Z
120	Igniter plate	319143-051	EKK1B
121	Surge box plate for 110 (T-KJr2) and 310 (T-K4) models Surge box plate for 510 (T-D2) models	319143-213 319143-176	EKK4H EK436
150	O-ring P18 NBR (Black)	319143-350	EZP18
151	O-ring P20 NBR (Black)	319143-057	EK042
152	Silicon ring for 110 Outdoor (T-KJr2-OS) Silicon ring for 310 Outdoor (T-K4-OS) and 510 Outdoor (T-D2-OS)	319143-370 319143-206	EK442 EKK3G
153	Rain protection plate in Exhaust chamber for 110 Outdoor (T-KJr2-OS), 310 Outdoor (T-K4-OS) and 510 Outdoor (T-D2-OS)	319143-216	EKK53
154	Exhaust port	319143-219	EKK56
401	Heat exchanger assembly for 110 Indoor (T-KJr2-IN) for 110 Outdoor (T-KJr2-OS) for 310 Indoor (T-K4-IN) for 310 Outdoor (T-K4-OS) for 510 Indoor (T-D2-IN) for 510 Outdoor (T-D2-OS)	319143-162 319143-166 319143-153 319143-157 319143-369 319143-177	EK418 EK426 EK406 EK413 TU002 EK437
402	Flow adjustment valve/Flow sensor for 110 (T-KJr2) and 310 (T-K4) models Flow adjustment valve/Flow sensor for 510 (T-D2) models	319143-167 319143-178	EK427 EK438
403	Bypass valve for 510 (T-D2) models	319143-186	EKK0U
404	Water inlet	319143-193	EKK1U
405	Inlet drain plug	319143-197	EKK2B
406	Inlet water filter	319143-198	EKK2C
407	Inlet thermistor for 110 (T-KJr2) and 310 (T-K4) models Inlet thermistor for 510 (T-D2) models	319143-214 319143-085	EKK4J EKK38

Output Temperature Chart

Item#	Description	Part#	
		110, 310, 510 models	T-KJr2, T-K4, T-D2 models
408	Outlet thermistor for 110 (T-KJr2) and 310 (T-K4) models Mixing thermistor for 510 (T-D2) models	319143-218 319143-190	EKK55 EKK1A
409	Water outlet	319143-194	EKK1V
410	Outlet drain plug	319143-199	EKK2E
411	Output thermistor for 510 (T-D2) models	319143-096	EKK2T
412	Hi-Limit switch for 110 (T-KJr2) and 310 (T-K4) models Hi-Limit switch for 510 (T-D2) models	319143-228 319143-095	EM212 EKN34
413	Overheat-cut-off fuse	319143-149	EK333
414	Heater	319143-200	EKK2R
415	Inlet heater	319143-078	EKK2P
450	Pipe heater fixing plate	319143-088	EKK27
451	Heater fixing plate 16	319143-125	EK031
452	Fuse fixing plate 18	319143-066	EKK26
453	Fuse fixing plate 14	319143-146	EK029
454	O-ring P4 FKM	319143-082	EZM04
455	O-ring P6 FKM	319143-080	EZM06
456	O-ring P14 FKM	319143-100	EZM14
457	O-ring P15 FKM	319143-091	EZM15
458	O-ring P16 FKM	319143-083	EZM16
459	Fastener "4-11" for 510 (T-D2) models	319143-097	EKH30
460	Fastener "14-22"	319143-105	EKK24
461	Fastener "16A"	319143-226	EM192
462	Fastener "16-25A" for 510 (T-D2) models	319143-205	EKK39
463	Silicon ring	319143-065	EKN50
701	Computer board for 110 (T-KJr2) models for 310 (T-K4) models for 510 (T-D2) models	319143-164 319143-158 319143-179	EK420 EK414 EK439
702	Transformer	319143-182	EKH09
703	Surge box	319143-168	EK428
704	AC120V wire for 110 (T-KJr2) models AC 120 V wire for 310 (T-K4) and 510 (T-D2) models	319143-222 319143-138	EKK5M EKK3C
705	Transformer wire for 110 (T-KJr2) models Transformer wire for 310 (T-K4) and 510 (T-D2) models	319143-155 319143-180	EK408 EK440
706	AC120V Power ON-OFF switch	319143-141	EKK4V
707	Switch wire for 110 (T-KJr2) models Switch wire for 310 (T-K4) and 510 (T-D2) models	319143-154 319143-181	EK407 EK441
708	Gas valve wire for 110 (T-KJr2) and 310 (T-K4) models Gas valve wire for 510 (T-D2) models	319143-207 319143-188	EKK3K EKK10
709	Flame rod wire for 110 (T-KJr2) models for 310 (T-K4) models for 510 (T-D2) models	319143-171 319143-208 319143-189	EK431 EKK3L EKK11
710	EH-IG wire for 110 Indoor (T-KJr2-IN) and 310 Indoor (T-K4-IN) EH-IG wire with freeze protection thermostat for 110 Outdoor (T-KJr2-OS), 310 Outdoor (T-K4-OS) and 510 Outdoor (T-D2-OS) EH-IG wire for 510 Indoor (T-D2-IN)	319143-209 319143-210 319143-187	EKK3R EKK40 EKK0Z
711	Igniter	319143-052	EKN74
712	High voltage igniter cable	319143-039	EKK2M

Output Temperature Chart


Item#	Description	Part#	
		110, 310, 510 models	T-KJr2, T-K4, T-D2 models
713	Freeze protection thermostat for 110 Indoor (T-KJr2-IN), 310 Indoor (T-K4-IN) and 510 Indoor (T-D2-IN)	319143-185	EKJ59
714	Proportional gas valve wire for 110 (T-KJr2) and 310 (T-K4) models Proportional gas valve wire for 510 (T-D2) models	319143-220 319143-133	EKK58 EKK12
715	Pump and multi cable for 510 (T-D2) models	319143-204	EKK36
716	Thermistors wire for 510 (T-D2) models	319143-195	EKK1Z
717	RS-VG wire for 510 (T-D2) models	319143-203	EKK35
718	Water valves wire for 510 (T-D2) models	319143-202	EKK33
719	Computer board cover for 110 (T-KJr2) and 310 (T-K4) models Computer board cover for 510 (T-D2) models	319143-212 319143-191	EKK49 EKK1M

OUTPUT TEMPERATURE CHART

Chart is based on properly sizes gas line


110 (T-KJr2) models

Output Temperature vs. GPM (Max. 6.6 GPM) with Various Inlet Water Temperature

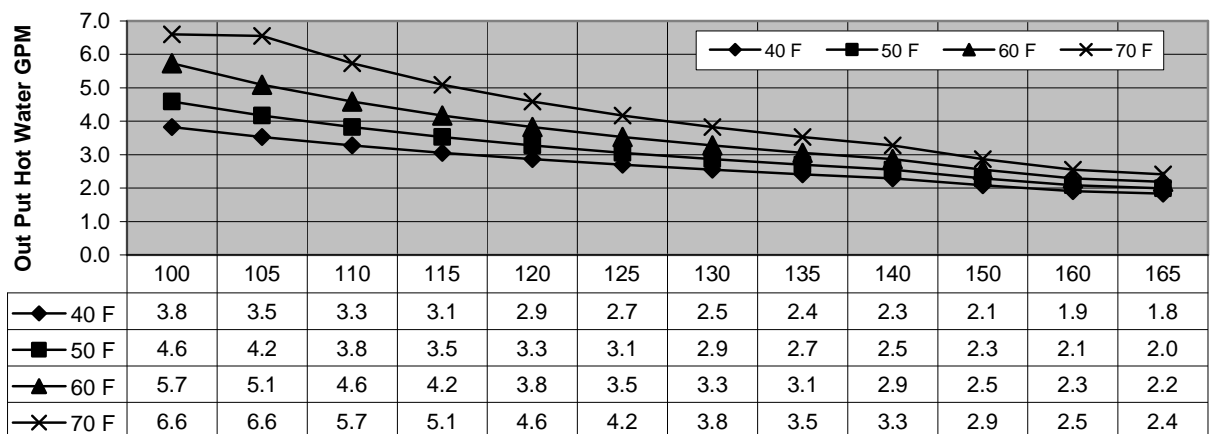


310 (T-K4) models

Output Temperature vs. GPM (Max. 8.0 GPM) with Various Inlet Water Temperature

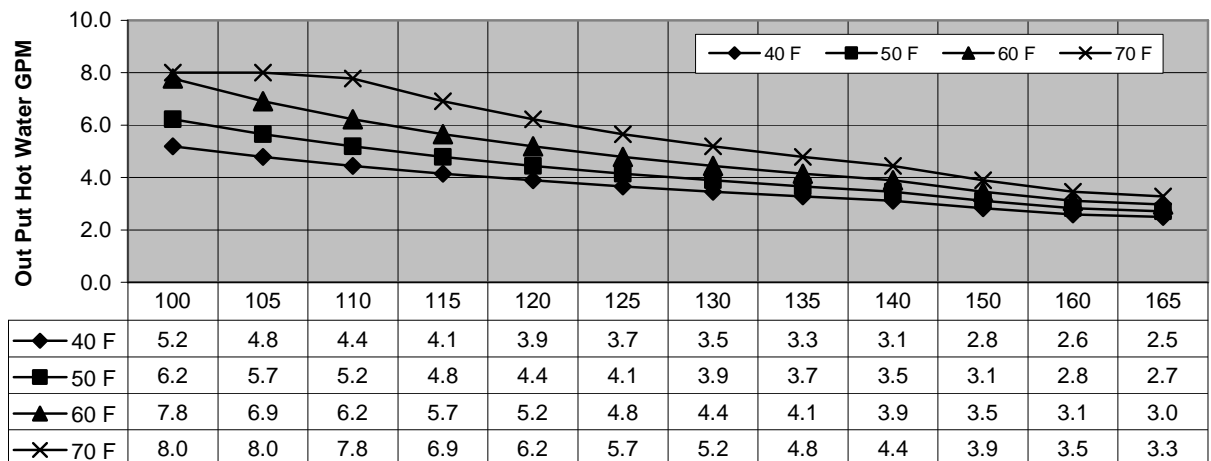

510 (T-D2) models

Output Temperature vs. GPM (Max. 10.0 GPM) with Various Inlet Water Temperature

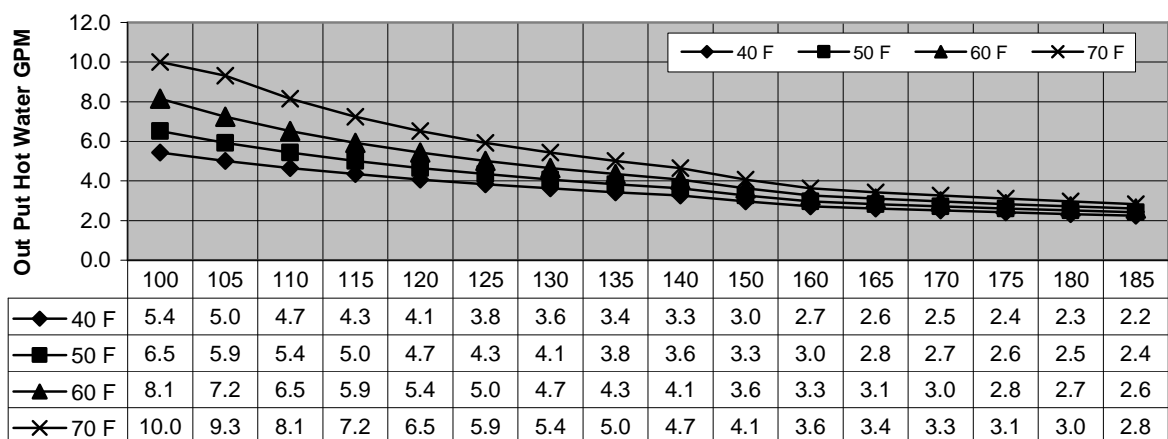

*When the set temperature is 131°F or higher, maximum flow rate is limited to 8.0 GPM.

LIMITED WARRANTY

1. General terms of limited warranty:

This limited warranty gives you specific legal rights, and you may also have other rights which vary from State to State. The manufacturer will honor the warranty to the original retail buyer at the original location only, and it is not transferable.

THIS WARRANTY COVERS ONLY FAILED MECHANICAL AND ELECTRICAL PARTS DUE TO FACTORY DEFECTS UNDER NORMAL USAGE FOR THE PRODUCT'S INTENDED PURPOSES AND WITHIN THE APPLICABLE PERIOD SPECIFIED IN THE FOLLOWING TABLES. ONLY DIRECT DAMAGES SHALL BE RECOVERABLE BY A CLAIMANT UNDER THIS LIMITED WARRANTY AND, IN NO EVENT, WHETHER AS A RESULT OF BREACH OF CONTRACT, BREACH OF WARRANTY, TORT LIABILITY (INCLUDING NEGLIGENCE), STRICT LIABILITY, INDEMNITY OR OTHERWISE WILL BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR INDIRECT CONSEQUENTIAL DAMAGES INCLUDING PROPERTY DAMAGE, PERSONAL DAMAGES, LOSS OF USE, OR INCONVENIENCE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

2. Warranty for models: 510 (T-D2) models

[Unit: Year]

Application				HX ⁽¹⁾	Parts	Labor
Single Family Domestic Hot Water	No Recirculation			12	5	1 ⁽³⁾
	On-Demand Recirculation ⁽²⁾					
	w/ Standard Recirculation	Aquastat Control		5	3	
		Pump Control				
		Timer Only		3	3	
No Pump Control (24 hr.)						
Commercial or Multi-Family Domestic Hot Water	No Recirculation			5	5	1 ⁽³⁾
	On-Demand Recirculation ⁽²⁾					
	w/ Standard Recirculation	Aquastat Control		3	3	
		Pump Control				
		Timer Only		3	3	
No Pump Control (24 hr.)						
Heating ⁽⁴⁾	All Types			5	5	1 ⁽³⁾

Warranty for models: 110 (T-Kjr2) and 310 (T-K4) models

[Unit: Year]

[Unit: Year]					
Application			HX ⁽¹⁾	Parts	Labor
Single Family Domestic Hot Water	No Recirculation		12	5	1 ⁽³⁾
	On-Demand Recirculation ⁽²⁾				
	w/ Standard Recirculation	Aquastat Control	3	3	
		Pump Control			
		Timer Only	1	1	
No Pump Control (24 hr.)					
Multi-Family Domestic Hot Water	No Recirculation		3	3	1 ⁽³⁾
	On-Demand Recirculation ⁽²⁾				
	w/ Standard Recirculation	Aquastat Control	1	1	
		Pump Control			
		Timer Only	1	1	
No Pump Control (24 hr.)					
Heating ⁽⁴⁾	All Types		1	1	1 ⁽³⁾
Commercial	All Types		1	1	1 ⁽³⁾

(1) Heat exchanger

(2) An on-demand recirculation system is a system that utilizes either a push-button or other type of manual activation (as opposed to automatic activation with a temperature sensor or timer) to activate the circulation pump. An on-demand recirculation system can use either the existing cold water line as the return line or have its own dedicated return line.

(3) Limited Labor Coverage

- The manufacturer will provide for reasonable labor charges associated with warranty repairs or replacements within one (1) year from the date of purchase. The manufacturer will only pay directly to the service provider.
- Warranty service must be performed by an authorized Service Representative. A list of authorized Service Representatives is available upon request.
- All warranty claims and warranty service must be authorized and approved by the manufacturer.

(4) Includes dual-purpose applications (combination heating and domestic).

3. Repair, Replacement or Refund:

The manufacturer or its authorized Service Representative will, at its sole discretion, repair or replace any failed or defective mechanical or electrical parts, or components thereof, or, if the manufacturer or its authorized Service Representative cannot replace said parts, and repair is not commercially practicable, the manufacturer or its authorized Service Representative will refund the purchase price. The manufacturer or its authorized Service Representative may, at its sole discretion, use new, refurbished or reconditioned parts.

4. Limitation on Duration of Implied Warranties:

ANY IMPLIED WARRANTIES ARISING UNDER STATE LAW, INCLUDING THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY, SHALL IN NO EVENT EXTEND PAST THE EXPIRATION OF ANY WARRANTY PERIOD HEREUNDER. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

5. THIS WARRANTY WILL NOT COVER THE FOLLOWING:

- Any product that is not installed by a licensed plumber, gas installer, or contractor.
- Damages due to accidents, abuse, misuse, improper installation, misapplication, or incorrect sizing.
- Damages due to fires, flooding, freezing, electrical surges, or any Acts of God.
- Damages due to unauthorized alterations, attachments, and/or repairs.
- Damages due to a lack of maintenance (e.g. water filter, water treatment system, vent blockage, etc.)
- Any product installed in an improper environment (e.g. corrosive, dusty, chemically contaminated, excessive lint, etc.).
- Freeze damage that occurs without taking proper preventive measures as described in the installation manual.
- Condensate damage due to improperly installed or lack of a condensate trap (drain).
- Any product not installed in compliance with all applicable local & state codes, ordinances, and good trade practices.
- Any product sold to or installed in areas outside of the fifty states (and the District of Columbia) of the United States of America and Canada.
- Any product installed in applications that cause the water heater to activate more than 300 times per day (this averages to an activation every 5 minutes in a 24-hour period).
- Any failures that are not due to defects in materials or workmanship (mechanical and/or electrical parts).
- Damages due to improper installation:
 - ☐ Gas: incorrect gas pipe sizing, incorrect gas meter sizing, incorrect gas type, and/or gas pressures that fall outside the product's specified range.
 - ☐ Water: incorrect water pipe sizing, water pressures that fall outside the product's specified range, recirculation flow rates that fall outside the product's specified range (air removal), and/or lack of proper methods of air removal in a closed-loop, circulation system (see installation manual for details).
 - ☐ Electric: supply power voltages that fall outside the product's specified range.
- Damages due to water quality:
 - ☐ Introduction of liquids other than potable water or potable water / glycol mixtures into the product.
 - ☐ Introduction of pool water, spa water, or any chemically treated water into the product.
 - ☐ Introduction of hard water measuring more than 7 grains per gallon (120 ppm) for single family domestic applications or more than 4 grains per gallon (70 ppm) for all other types of applications into the product.
 - ☐ Introduction of untreated or poorly treated well water into the product.
 - ☐ Introduction of water with pH levels less than 6.5 and greater than 8.5 into the product.

ATKJ2

ATK4

ATD2

62S051-3