




## INSTALLATION INSTRUCTIONS PFSK60 & PFSK72 ACRYLIC REMOVABLE SKIRTS

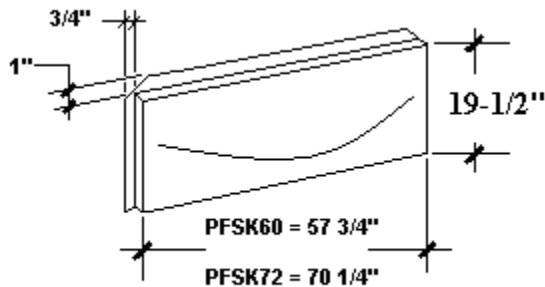


### INTRODUCTION:


PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY before proceeding with the skirt installation.

### INSTALLATION PROCEDURES:


1. With soaking tub or whirlpool in place, measure from the bottom of the tub lip to the finished floor surface (see Illustration A). Subtract 1/8" from this dimension for clearance. This adjusted dimension will be used to determine the proper skirt height for your installation.

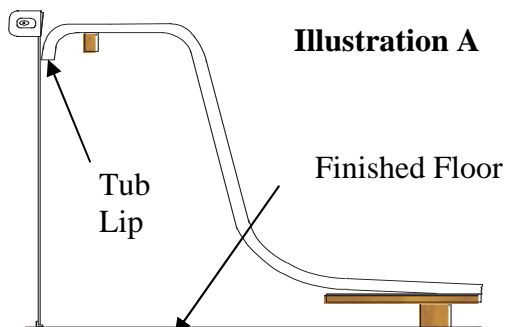

### Illustration B

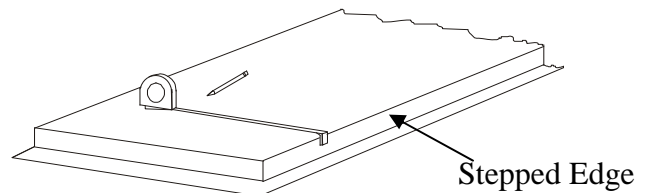


2. Lay skirt face-up on flat surface. Hook tape measure on stepped edge of skirt near top and mark the adjusted dimension (identified in step 1) near the bottom edge of skirt (see Illustration B). Repeat this several times across length of the skirt. Draw a straight line at the marks on skirt. This will be your cut line to custom fit the skirt to your installation.
3. Skirt can now be trimmed to the proper height by using a circular saw, jig saw or table saw with a medium toothed blade. To prevent scratching of the acrylic surface, tape over area to be cut. Cut at a slow cutting speed and from acrylic side to prevent chipping the acrylic.
4. Insert the lip of trimmed skirt up under tub edge, between the wooden blocks and the front tub lip (see Illustration C on back). **Note:** skirt corners have been notched to facilitate installation. Check to see that you have cut the skirt to the proper height. Remove skirt.

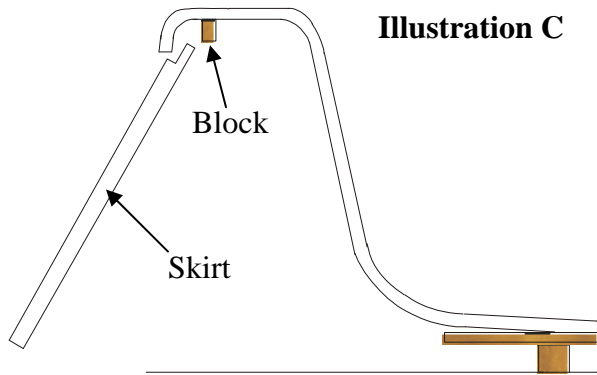


used as back-stops, (1"x1" or 2"x2" and at least 6" in length), along the inside of the line drawn in Step 5 (see Illustration E). Secure blocks with screws or nails if your floor is wood. If your floor is concrete or tiled you will need to use an adhesive to attach the blocks.

- Using a plumb bob or level, project front edge of tub lip down to floor surface and make a mark on floor (see Illustration D). Repeat several times across front of tub. Draw a straight line at these marks.

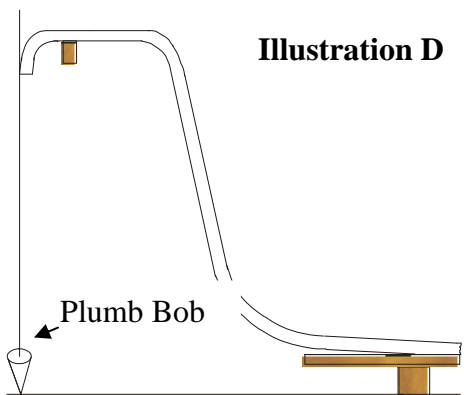

**Illustration E**

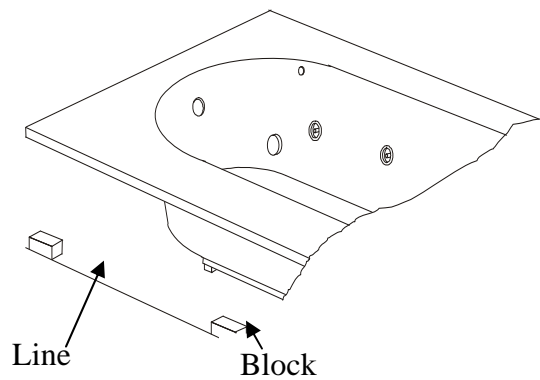

- Attach at least 3 wooden blocks (not provided), to be

- For final skirt installation and to allow for removal if necessary in the future, adhere skirt to wooden back support blocks with silicone or other removable adhesive. Place a straight board against front bottom of skirt to hold it firmly in place while the adhesive cures.

Note: Final installation will leave clearance between both ends of skirt and finished wall to allow for future removal.

