


# Installation Instructions

**Always be aware of, and follow local plumbing codes**

Failure to follow these instructions could result in personal injury or property damage

1. Remove wax and clean existing flange. Remove closet bolts (if installed)
2. Pre-align Raise-A-Ring with existing flange so that the closet bolt slots or notches to be used are in the same position as those on existing flange.  
**Note:** The Raise-A-Ring must be fastened to the subfloor using screws on each side of both tracks or notches that bolts will be installed into. It may be necessary to remove mounting screws from existing flange in order to attach Raise-A-Ring (through existing flange) to subfloor.
3. Fill "silicone track" on underside of Raise-A-Ring with 100% silicone sealant. Be sure to apply enough sealant such that it makes substantial contact all the way around the surface of existing flange when the Raise-A-Ring is set on existing flange.
4. Align and set the Raise-A-Ring on the existing flange and fasten to the subfloor. Use screws on each side of both tracks or notches to be used to hold closet bolts.
5. After allowing silicone sealant to cure, set closet bolts into tracks or notches and continue with installation of bowl wax and toilet fixture according to manufacturers instructions.

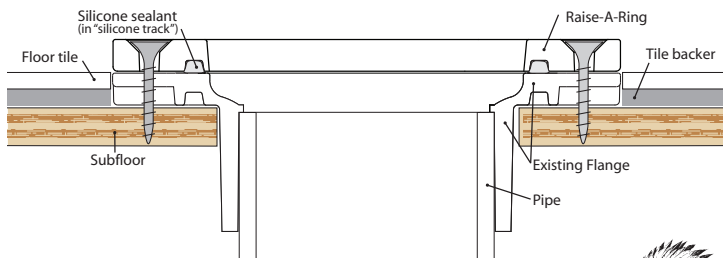

1-800-821-3944 [www.siouxchief.com](http://www.siouxchief.com)  
RAISE-A-RING INSTRUCTION SHEET - 08/11  
© 2011 SIOUX CHIEF MFG.