

Assembly & Installation Instructions

CAUTION: Read instructions carefully and turn electricity off at main circuit breaker panel before beginning installation.

3052, 3053, 3054, 3055, 3056

WARNING - If any Special Control Devices are used with this Fixture, Follow the Instructions Carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a Qualified Electrical Contractor.

CAUTION - All glass is fragile, use care when handling Glass component(s) and/or Lamp(s).

ASSEMBLY STEPS:


PASOS PARA ENSAMBLAR:

MÓDE D'ASSEMBLAGE:

- | | | |
|--------|---|---|
| 1. E,H | → | A |
| 2. D | → | H |
| 3. B,A | → | C |
| 4. P | → | Q |
| 5. F | → | G |
| 6. I,K | → | H |
| 7. M,N | → | L |
| 8. O | → | L |

DRILL (2) $\varnothing 5/8"$ HOLES FOR MOUNTING WITH TOGGLES (P). TOGGLES (P) OR WOOD SCREWS MUST BE USED FOR SECURING BACK PLATE TO WALL (Q).

B, C, G & O
(NOT FURNISHED
(NO INCLUIDA)
(NON FOURNIE)

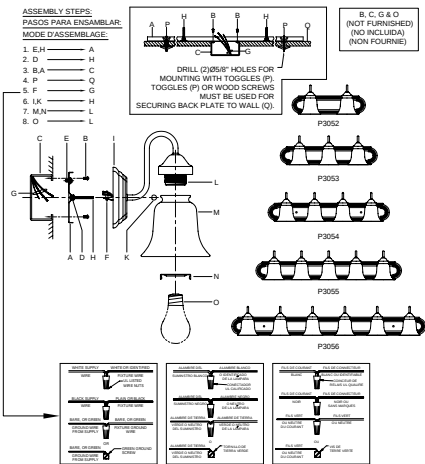

PAGE 1 of 2

TABLE 1

Instrucciones de ensamblaje e instalación

Precaución: Lea cuidadosamente las instrucciones y desconecte la electricidad del cortacircuitos principal antes de iniciar la instalación.

ADVERTENCIA - Si usa algún dispositivo especial de control con este aparato de luz, siga las instrucciones cuidadosamente para asegurar la completa conformidad con los requisitos N.E.C. Si existe alguna duda, contacte un electricista calificado.

PRECAUCION - El vidrio es frágil; tenga cuidado al manipular el (los) elemento(s) de vidrio y/o la(s) bombilla(s).




Instructions d'Assemblage et Installation

Mise en garde: Lire les instructions avec soin et couper le courant au disjoncteur central avant de commencer l'installation.

AVERTISSEMENT - Si l y a d'autres mécanismes régulateurs qui s'emploient avec ce dispositif, suivre soigneusement les instructions pour satisfaire aux exigences NEC. Si vous avez des questions, consulter un électricien qualifié.

MISE EN GARDE - Le verre est toujours fragile: maniez le(s) composant(s) et/ou l' (les) ampoule(s) avec prudence.



PAGE 2 of 2

REVISION TRACKING HISTORY

REV	DESCRIPTION	DATE	INIT.	ECN
A	ADD VIEW FOR TOGGLE BOLTS. REMOVE WASHER "J". REVISE STEPS SEQUENCE FOR STUD "Y" CHANGED TO SCREW AND EYELET "D" CHANGED TO HEX NUT.	07-17-07	DW	707006

92012102

THIS PAGE IS FOR RECORD PUPOSES ONLY.
DO NOT PRINT THIS PAGE.

DO NOT INCLUDE THIS PAGE AS PART OF THE INSTRUCTION SHEET.